

Aculab SS7

Distributed TCAP API Guide

PROPRIETARY INFORMATION

The information contained in this document is the property of Aculab Plc and may be the subject of patents pending or granted, and must not be copied or disclosed without prior written permission. It should not be used for commercial purposes without prior agreement in writing.

All trademarks recognised and acknowledged.

Aculab Plc endeavours to ensure that the information in this document is correct and fairly stated but does not accept liability for any error or omission.

The development of Aculab products and services is continuous and published information may not be up to date. It is important to check the current position with Aculab Plc.

Copyright © Aculab plc. 2006, 2007, 2008: All Rights Reserved.

Document Revision

Rev	Date	By	Detail
6.8.0A	07.12.06	DSL	Draft issue
6.8.2A	02.03.07	DSL	Add definitions for ANSI TCAP and thread pools
6.8.3	21.03.07	DSL	First full issue
6.10.1	12.09.08	DSL	Typographical corrections, improved explanations. <code>acu_asn1_decode_object_id_int/str()</code> added block and cyclic trace modes added.
6.10.2	16.10.08	DSL	Typographical corrections, <code>acu_tcap_msg_copy_rx_buffer()</code> and the ability to send a pre-built tcap message added.
6.10.3	30.10.08	DSL	Minor clarifications.

CONTENTS

1	Introduction	6
1.1	Structure of TCAP.....	6
1.2	TCAP with dual resilient MTP3	6
1.3	TCAP library data structures	7
1.4	Functional Overview.....	7
2	API Functions.....	8
2.1	TCAP API functions.....	8
2.1.1	Abbreviations and nomenclature.....	8
2.1.2	TCAP Header files	9
2.1.2.1	tcap_api.h	9
2.1.2.2	tcap_asn1_codec.h.....	9
2.1.2.3	tcap_synch.h	9
2.1.3	Configurable parameters	10
2.1.3.1	Configuration file format	12
2.1.4	Tracing.....	13
2.1.4.1	acu_tcap_trace/trace_v/trace_buf	13
2.1.4.2	acu_tcap_trace_error.....	14
2.1.4.3	acu_tcap_strerror.....	14
2.1.5	SCCP access functions	15
2.1.5.1	acu_tcap_ssap_create.....	15
2.1.5.2	acu_tcap_ssap_delete.....	15
2.1.5.3	acu_tcap_ssap_connect_sccp.....	15
2.1.5.4	acu_tcap_ssap_set_cfg_int/str	16
2.1.5.5	acu_tcap_ssap_get_locaddr/remaddr.....	16
2.1.6	Transaction functions	17
2.1.6.1	acu_tcap_transaction_create	17
2.1.6.2	acu_tcap_transaction_delete	17
2.1.6.3	acu_tcap_ssap_get_uni_transaction.....	17
2.1.6.4	acu_tcap_trans_set_userptr.....	18
2.1.6.5	acu_tcap_trans_get_userptr	18
2.1.6.6	acu_tcap_trans_get_ids.....	18
2.1.6.7	acu_tcap_trans_set_cfg_int/str	19
2.1.6.8	acu_tcap_trans_get_locaddr/remaddr	19
2.1.7	Message sending functions.....	20
2.1.7.1	acu_tcap_msg_alloc	20
2.1.7.2	acu_tcap_msg_free.....	20
2.1.7.3	acu_tcap_msg_get_a1b	20
2.1.7.4	acu_tcap_msg_init.....	21
2.1.7.5	acu_tcap_msg_add_dialogue.....	21
2.1.7.6	acu_tcap_msg_add_dlg_userinfo.....	22
2.1.7.7	acu_tcap_msg_add_dlg_security_context.....	23
2.1.7.8	acu_tcap_msg_add_dlg_confidentiality	23
2.1.7.9	acu_tcap_msg_add_comp_invoke.....	24
2.1.7.10	acu_tcap_msg_add_comp_result.....	24
2.1.7.11	acu_tcap_msg_add_comp_error.....	25
2.1.7.12	acu_tcap_msg_add_comp_reject.....	25
2.1.7.13	acu_tcap_msg_add_ansi_abort_userinfo.....	25
2.1.7.14	acu_tcap_msg_send	26
2.1.7.15	acu_tcap_msg_reply_reject	26
2.1.8	Message receiving functions.....	27
2.1.8.1	acu_tcap_ssap_msg_get.....	27
2.1.8.2	acu_tcap_trans_msg_get.....	28
2.1.8.3	acu_tcap_event_msg_get.....	28
2.1.8.4	acu_tcap_msg_decode	29
2.1.8.5	acu_tcap_msg_has_components.....	30
2.1.8.6	acu_tcap_msg_get_component.....	31

2.1.8.7	acu_tcap_msg_copy_rx_buffer.....	33
2.1.8.8	acu_tcap_trans_unblock.....	33
2.1.8.9	acu_tcap_trans_block.....	33
2.1.9	Operation functions.....	34
2.1.9.1	acu_tcap_operation_timer_start.....	34
2.1.9.2	acu_tcap_operation_timer_restart.....	34
2.1.9.3	acu_tcap_operation_cancel.....	35
2.1.10	Connection status functions.....	36
2.1.10.1	acu_tcap_get_con_state.....	36
2.1.10.2	acu_tcap_msg_get_con_state.....	37
2.1.11	Remote SP and SSN status functions.....	38
2.1.11.1	acu_tcap_get_sccp_status.....	38
2.1.11.2	acu_tcap_msg_get_sccp_status.....	39
2.1.11.3	acu_tcap_enable_user_status.....	39
2.1.11.4	acu_tcap_enable_sp_status.....	39
2.1.12	TCAP message events.....	40
2.1.12.1	acu_tcap_event_create.....	40
2.1.12.2	acu_tcap_event_delete.....	40
2.1.12.3	acu_tcap_event_wait.....	40
2.1.12.4	acu_tcap_event_get_os_event.....	41
2.1.12.5	acu_tcap_event_clear.....	41
2.1.12.6	acu_tcap_event_ssap_attach.....	41
2.1.12.7	acu_tcap_event_ssap_detach.....	41
2.1.12.8	acu_tcap_event_ssap_detach_all.....	42
2.1.12.9	acu_tcap_event_trans_attach.....	42
2.1.12.10	acu_tcap_event_trans_detach.....	42
2.1.12.11	acu_tcap_event_trans_detach_all.....	42
2.2	ASN.1 Encoder/Decoder functions.....	43
2.2.1	Header file tcap_asn1_codec.h.....	43
2.2.1.1	acu_asn1_buf_t structure.....	43
2.2.1.2	Error codes for ASN.1 codec.....	43
2.2.1.3	ASN.1 tag values.....	44
2.2.2	Common functions.....	45
2.2.2.1	acu_asn1_buf_init.....	45
2.2.2.2	acu_asn1_buf_free.....	45
2.2.2.3	acu_asn1_strerror.....	45
2.2.3	ASN.1 Encoder Functions.....	46
2.2.3.1	acu_asn1_put_constructed.....	46
2.2.3.2	acu_asn1_put_end_constructed.....	46
2.2.3.3	acu_asn1_put_end_all_constructed.....	46
2.2.3.4	acu_asn1_put_int.....	47
2.2.3.5	acu_asn1_put_unsigned.....	47
2.2.3.6	acu_asn1_put_octet_8.....	47
2.2.3.7	acu_asn1_put_octetstring.....	48
2.2.3.8	acu_asn1_put_bitstring.....	48
2.2.3.9	acu_asn1_put_raw_octets.....	48
2.2.3.10	acu_asn1_put_space.....	48
2.2.3.11	acu_asn1_encode_object_id_str/int.....	49
2.2.4	ASN.1 Decoder functions.....	50
2.2.4.1	acu_asn1_get_tag_len.....	50
2.2.4.2	acu_asn1_get_reference.....	50
2.2.4.3	acu_asn1_get_int.....	51
2.2.4.4	acu_asn1_get_unsigned.....	51
2.2.4.5	acu_asn1_get_octet_8.....	51
2.2.4.6	acu_asn1_get_octetstring.....	51
2.2.4.7	acu_asn1_decode_object_id_str/int.....	52
2.3	Thread support functions.....	53
2.3.1	Mutex functions.....	53

2.3.1.1	acu_tcap_mutex_create.....	53
2.3.1.2	acu_tcap_mutex_delete.....	53
2.3.1.3	acu_tcap_mutex_lock.....	53
2.3.1.4	acu_tcap_mutex_trylock.....	54
2.3.1.5	acu_tcap_mutex_unlock.....	54
2.3.2	Condition variable functions	55
2.3.2.1	acu_tcap_condvar_create.....	55
2.3.2.2	acu_tcap_condvar_delete.....	55
2.3.2.3	acu_tcap_condvar_wait.....	55
2.3.2.4	acu_tcap_condvar_wait_tmo.....	55
2.3.2.5	acu_tcap_condvar_broadcast	56
2.3.3	Thread functions	57
2.3.3.1	acu_tcap_thread_create.....	57
2.3.3.2	acu_tcap_thread_exit	57
2.3.3.3	acu_tcap_thread_join	57
2.3.3.4	acu_tcap_thread_id	57
2.3.4	Thread Pool functions	58
2.3.4.1	acu_tcap_thread_pool_create.....	58
2.3.4.2	acu_tcap_thread_pool_destroy.....	58
2.3.4.3	acu_tcap_thread_pool_num_active	58
2.3.4.4	acu_tcap_thread_pool_num_idle.....	59
2.3.4.5	acu_tcap_thread_pool_num_jobs.....	59
2.3.4.6	acu_tcap_thread_pool_submit.....	59
Appendix A: Building TCAP applications.....		60
A.1	Linux.....	60
A.2	Solaris	60
A.3	Windows	60
Appendix B: tcap_api.h		61
B.1	Error Codes	61
B.2	SCCP addresses.....	63
Appendix C: System limits.....		64
Appendix D: ASN.1 BER encoding		65
D.1	Basic encoding rules	65
D.2	Universal tags	66
D.2.1	Object Identifiers.....	66
D.2.2	External data	66

1 Introduction

This document describes the Distributed TCAP API.

1.1 Structure of TCAP


The Aculab Distributed TCAP has the SCCP code tightly coupled with MTP3 and a separate TCAP library that is linked to the application. The TCAP library communicates with SCCP using a proprietary protocol over TCP/IP and a small TCAP interface driver.

The product supports:

- Multiple TCAP applications using different SSNs.
- Structured and unstructured TCAP dialogues.
- A TCAP application connecting to multiple SCCP endpoints (e.g.: several SSNs or multiple MTP3 local pointcodes).
- TCAP applications in a dual-MTP3 environment
- Multiple copies of the same TCAP application running on multiple chassis.
- Multiple TCAP applications running in a single chassis.
- ITU and ANSI TCAP, including ITU TCAP over ANSI SCCP and vice versa.

1.2 TCAP with dual resilient MTP3

The diagram below shows the components of a dual resilient MTP3 system.

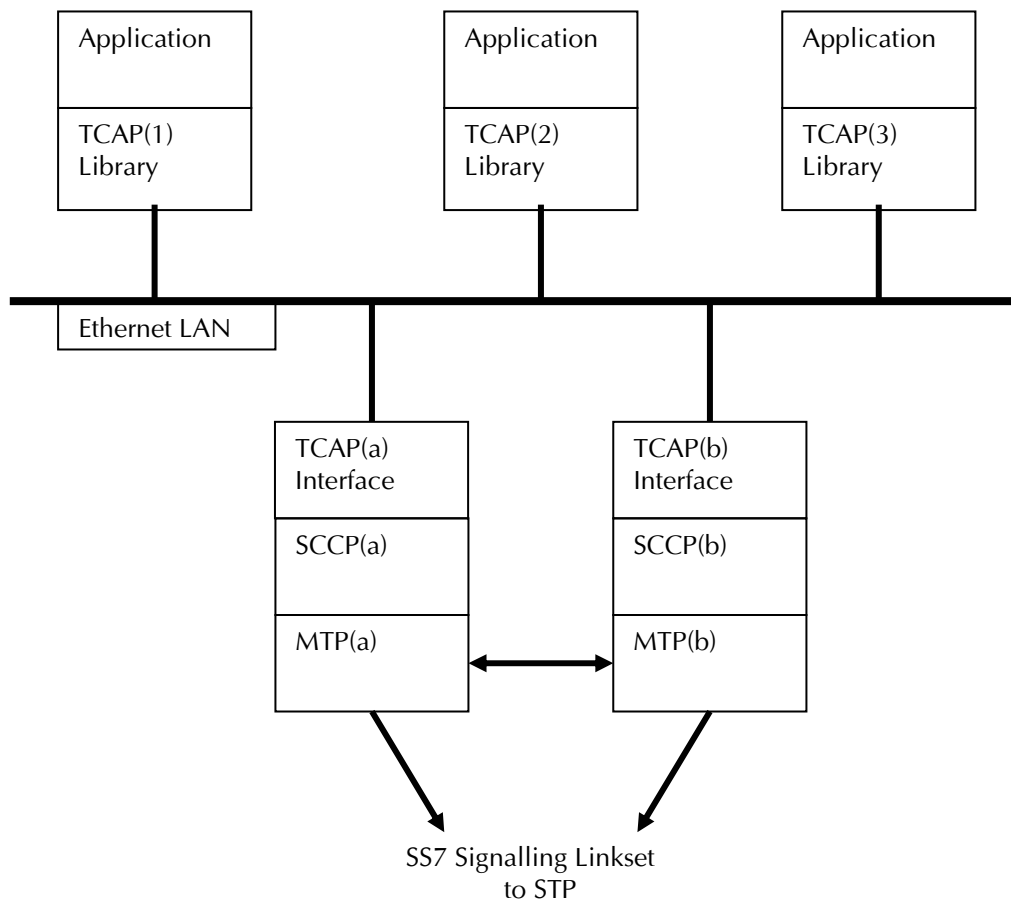

The TCAP interface, SCCP and MTP3 code all reside in the kernel. The application is shown running in a different system, but can run in the same system as SCCP and MTP3 by connecting to 'localhost'.

SCCP must pass inward messages to the correct application. This is done by allocating different ranges of TCAP transaction identifiers to each application. Begin (ANSI Query) and Unidirectional messages are given to each application in a round-robin fashion.

1.3 TCAP library data structures

The TCAP library defines the following major data structures:

- The ssap structure (SCCP service access point). One of these must be created for each SSN. The TCP/IP connection to SCCP is controlled from this structure. Everything refers (directly or indirectly) to an ssap structure. An application would normally only create a single ssap structure.
- The transaction structure. This holds all the information for a TCAP message exchange with the TCAP peer. Multiple transaction structures can be created on each ssap.
- The msg structure. This is used for passing TCAP messages between the application and the library.
- The sccp_addr structure. This is used to hold address information.

All the fields of the ssap and transaction structures are private to the library.

1.4 Functional Overview

A TCAP application should perform the following steps:

- Create a ssap structure and initialise the configurable fields (from a configuration file or directly).
- Connect to the SCCP systems.

If the application is going to initiate a TCAP transaction:

- Create a transaction structure.

If the application is a server, wait for the first message; the library will allocate a transaction area.

- Allocate a message, build and send it to SCCP.
- Wait for a response on either the ssap queue, or transaction queue (the response is added to both).
- When all messages have been sent/received, delete the transaction.

Unidirectional dialogues work the same way, except that all inbound messages are queued on a single transaction. Unidirectional messages can be sent from that transaction, or from another transaction area.

An application can create any (reasonable) number of transactions.

2 API Functions

2.1 TCAP API functions

2.1.1 Abbreviations and nomenclature

The following are used:

component	the component part of a TCAP message
comp	component
conv	conversation (ANSI message type)
condvar	condition variable
dialogue	the dialogue portion of a TCAP message
dlg	dialogue
pdu	protocol data unit
ssap	SCCP service access point
transaction	a set of messages using the same transaction-id
trans	transaction

Note Q.771 especially section 3.1 uses the word dialogue for a sequence of messages. This implementation doesn't have separate component and transaction sublayers and uses 'transaction' throughout to avoid confusion between message dialogues and the dialogue portion of a message.

2.1.2 TCAP Header files

All the definitions start `acu_tcap_` or `ACU_TCAP_` (or similar) in order to avoid polluting other namespaces.

The definitions are all in C, but can be used from C++ applications.

Note A significant amount of pre-processor 'magic' is used to avoid replicating information.

2.1.2.1 `tcap_api.h`

This header file contains all the definitions for the TCAP API.

The majority of the structures are described with the function that uses them, additional information is in Appendix B:

2.1.2.2 `tcap_asn1_codec.h`

This header file contains the definitions for the ASN.1 BER encoder/decoder. See Section 2.2.1 for more information.

2.1.2.3 `tcap_synch.h`

This header file contains the definitions for the synchronisation and thread-pool functions.

2.1.3 Configurable parameters

TCAP's configurable values can either be read from a configuration file when an ssap is created, or set directly on the ssap or transaction by function call.

Whenever a transaction is created, it gets a copy of its configuration information from its ssap.

Once the TCAP application has connected to the SS7 driver, parameters can also be changed using `ss7maint`. This is particularly useful for changing the trace parameters.

Configurable parameters can be placed into three groups

ssap parameters, these control tracing and the connection to the SS7 driver:

Name	Type	Default	Description
LOGFILE	string		Name of logfile to open.
LOGFILE_MAX_SIZE	integer	1MB	Size (bytes) before logfile rotated.
LOGFILE_APPEND	boolean	no	Append to existing logfile.
LOGFILE_OLD_KEPT	integer	5	Number of old logfiles kept.
TRACE_TAG	string		Name for trace entries.
TRACE_BUFFER_SIZE	integer	32768	Size of cyclic trace buffer.
TRACE_MODE	integer	0	Determines when trace buffer is written to file, see section 2.1.4
SERVER	boolean	no	Process inward BEGIN messages.
UNI_SERVER	boolean	no	Process inward UNIDIRECTIONAL.
NI	integer	from mtp3	Network Indicator.
TRACE_LEVEL_ALL	integer	5	Set all trace levels.
TRACE_LEVEL_xxx	integer	5	Set trace level for source 'xxx', see section 2.1.4.
TRACE_LEVEL(n)	integer	5	Set trace level for source 'n'.
HOST_A_NAME	string	127.0.0.1	IPv4 name of host A.
HOST_A_PORT	integer	8256	TCP/IP port number.
HOST_A_PASSWORD	string		Password for host A.
HOST_B_NAME	string		IPv4 name of host B.
HOST_B_PORT	integer	8256	TCP/IP port number.
HOST_B_PASSWORD	string		Password for host B.
RX_BUFLLEN	integer	128kB	Size (bytes) of TCP/IP receive buffer.
TX_QUEUE_LEN	integer	16	Number of TCAP messages queued before transmit flow control reported.
KEEPALIVE_TIMEOUT	integer	10	Seconds between keepalives, set to zero to disable keepalives.
CONNECT_TIMEOUT	integer	10	Timeout for TCP/IP connection establishment.

If the SERVER and UNI_SERVER options are changed after the connection to the driver is made, then the driver is informed of the new value. This allows one node of a distributed application to gracefully shutdown.

General transaction parameters are settable on both ssap and transactions; transactions inherit the values from the ssap:

Name	Type	Default	Description
QOS_RET_OPT	boolean	no	SCCP 'return on error'.
QOS_SEQ_CTRL	boolean	no	SCCP 'sequential delivery', if enabled the 'sls' value is taken from the low bits of the local transaction id.
QOS_PRIORITY	integer	~0u	SCCP 'message priority'. ~0u requests the default of 0 for ANSI and absent for ITU.
QOS_RESPONSE_PRI	integer	~0u	SCCP 'message priority' for response messages, default (~0u) is 1 for ANSI and absent for ITU.
OPERATION_TIMEOUT	integer	60	Default operation timeout (seconds).
ADD_TCAP_VERSION	boolean	no	Add protocol version parameter to dialogue messages.
REVERSE_ROUTE	boolean	no	Send messages back to the point code from which they came, ignoring global title translation in the local SCCP.

Address parameters, local and remote (replace LOCAL with REMOTE) are settable on ssaps and transactions; transactions inherit the values from the ssap. See section B.2 for further details:

Name	Type	Default	Description
LOCAL_FLAGS	integer		Address flags.
LOCAL_GTI	integer		Global Title Indicator.
LOCAL_SSN	integer		SSN.
LOCAL_PC	integer		SCCP address pointcode.
LOCAL_RL_PC	integer		MTP routing label pointcode.
LOCAL_TT	integer		Translation Type.
LOCAL_NP	integer		Numbering Plan.
LOCAL_ES	integer		Encoding Scheme.
LOCAL_NAI	integer		Nature of Address Indicator.
LOCAL_GT_DIGITS	BCD		Global Title digits.

The eight address fields (GTI, SSN, PC, RL_PC, TT, NP, ES and NAI) have a 'data valid' bit set whenever they are set via the configuration interface. This bit can be cleared by setting the parameter CLEAR_LOCAL_SSN (etc) to an empty string. This might be needed to stop SCCP including the parameter (e.g. the local ssn) in a message.

When calling the functions to set configuration item, the names above must be preceded by ACU_TCAP_CFG_ (e.g. ACU_TCAP_CFG_REMOTE_PC)

Note The configured values for the remote address are overwritten with the actual remote address when the first backwards message arrives.

2.1.3.1 Configuration file format

The TCAP configuration file has a similar format to that of the ss7 protocol stack. It should contain a single block of configuration data bracketed between [TCAP] and [endTCAP]. Each line inside the configuration block has the format '*parameter = value*', where *parameter* is one of the configurable parameter names, and *value* is the required value.

Comments can be added to any line by preceding the comment with a '#' character. Blank lines are ignored. The lines before [TCAP] and after [endTCAP] are currently ignored, but this isn't guaranteed as additional sections may be added at some later release.

The parameter names can be specified in upper or lower case. For compatibility with other parts of the Aculab SS7 protocol stack, the configuration file can contain localxxx and remotexxx instead of local_xxx and remote_xxx.

For example:

```
[TCAP]
  trace_tag = 2020
  logfile_append = y
  logfile = tcap2020.log
  localpc = 2020
  localssn = 27
  remote_pc = 7070
  remote_ssn = 143
  server = y
  host_a_name = sccp_host_a
  host_a_password = tcap_password
  host_b_name = sccp_host_b
  host_b_password = tcap_password
[EndTCAP]
```

The SS7 stack configuration file on sccp_host_a (that for sccp_host_b is similar) needs to contain the following:

```
[SP]
  LocalPC = 2020
  [TCAP]
    password = tcap_password
  [EndTCAP]
  [SCCP]
    master = y
  [EndSCCP]
  [MTP3]
    [DUAL]
      host = sccp_host_b
      master = y
      listen = 0
      connect = 1
      password = dual_password
    [EndDUAL]
  [DESTINATION]
    RemotePC = 7070
  [EndDESTINATION]
  [EndMTP3]
[EndSP]
```

2.1.4 Tracing

The TCAP library contains extensive tracing of the API calls and the interface to SCCP. Each trace call specifies a trace source (0 to 63) and trace level (0 to 15). The level of trace output can be set separately for each trace source from the application configuration file, from the program by calling `acu_tcap_ssap_set_cfg_int()`, or from the command line by running `ss7maint tcapconfig`.

Tracing starts when the `LOGFILE` parameter is set for the `ssap`.

By default the trace buffer is written to the logfile after each trace entry is complete. This can be modified by setting `TRACE_MODE` to `ACU_TCAP_TRACE_MODE_BLOCK` (1) or `ACU_TCAP_TRACE_MODE_CYCLIC` (2). In block mode the buffer is written when full, in cyclic mode the buffer just wraps (discarding trace entries). The buffer is always written when a message with trace level 0 or 1 is written, or when the trace mode is set (even if the value doesn't change).

The logfile is always opened in 'append' mode (although it may be truncated). On Linux and Solaris systems this allows multiple programs and `ssaps` to log to a common file.

Note On Windows systems, using a common log file can lead to corrupted log entries.

If the size of the logfile exceeds the `LOGFILE_MAX_SIZE` bytes parameter, then a new logfile `logfile.1` (et seq) is opened. The number of old logfiles is restricted to `LOGFILE_OLD_KEPT` (default is 5). The sequence number of the current logfile is kept in `logfile.index`

The logfile is formatted so that '`ss7maint decode`' can be used to pretty-print the `tcap` messages.

Functions are supplied so that the application can add items to the library log file.

Note The default level of tracing has a significant performance penalty.

Trace sources:

<code>APPLICATION(0)</code> to	<code>0x00</code>	16 trace sources available for application use
<code>APPLICATION(15)</code>	<code>0x0f</code>	
<code>API_ENTRY</code>	<code>0x10</code>	Entry to API routine (not all functions make trace calls)
<code>API_EXIT</code>	<code>0x11</code>	Normal exit from API function
<code>API_ERROR</code>	<code>0x12</code>	Error exit from API function (might be an internal function)
<code>API_EVENT</code>	<code>0x13</code>	Significant event
<code>API_INFO</code>	<code>0x14</code>	Additional information
<code>API_CONFIG</code>	<code>0x15</code>	Configuration changes
<code>API_OP_TIMER</code>	<code>0x16</code>	Operation state engine and timers
<code>ENCODER</code>	<code>0x20</code>	TCAP message encoder
<code>DECODER</code>	<code>0x21</code>	TCAP message decoder
<code>TCP</code>	<code>0x30</code>	TCP/IP connection establishment and control
<code>TCP_SEND</code>	<code>0x31</code>	TCP/IP messages being sent
<code>TCP_RECV</code>	<code>0x32</code>	TCP/IP messages being received

Other values are reserved for future use.

2.1.4.1 `acu_tcap_trace/trace_v/trace_buf`

```
void acu_tcap_trace_v(acu_tcap_ssap_t *ssap, unsigned int flags, const void
*buf, int buf_len, const char *fmt, va_list ap);
void acu_tcap_trace(acu_tcap_ssap_t *ssap, unsigned int flags, const char
*fmt, ...);
void acu_tcap_trace_buf(acu_tcap_ssap_t *ssap, unsigned int flags, const void
*buf, int buf_len, const char *fmt, ...);
```

Purpose

These functions output text to the trace buffer, `acu_tcap_trace_buf()` adds a hexdump of `buf` following the text output.

Parameters

<code>ssap</code>	the <code>ssap</code> structure the trace is for
<code>flags</code>	usually <code>ACU_TCAP_TRF(part, source, level)</code>
<code>part</code>	One of <code>FIRST</code> , <code>MIDDLE</code> , <code>LAST</code> or <code>ONLY</code> indicating which part of the trace entry is being generated.
<code>source</code>	<code>APPLICATION(n)</code> for <code>n</code> between 0 and 9, identifying the source of the trace.
<code>level</code>	0 to 15 indicating the level (high number for more verbose trace) of this call, the default is usually 5
<code>buf</code>	address of buffer area to hexdump following the format output
<code>buf_len</code>	number of bytes to hexdump
<code>fmt</code>	<code>printf</code> format for trace arguments
<code>ap</code>	variable argument list for underlying <code>printf</code> call

The `flags` parameter specifies the trace source and level and also indicates which part of a trace entry is being generated (allowing a single trace entry to be generated by multiple calls to the trace functions). A short header including the system time is output at the start of each trace entry. The trace is locked while a trace entry is generated (i.e. from the call specifying `FIRST` to that specifying `LAST`) to avoid trace output from different threads being intermixed – even when multiple threads try to write concurrently to the same log file.

The trace is output if the `level` in the call is less than that set using `acu_tcap_ssap_set_cfg_int()` for the same source.

Note The trace is formatted by a local version of `snprintf()` which does not support floating point format specifiers.

2.1.4.2 `acu_tcap_trace_error`

```
int acu_tcap_trace_error(acu_tcap_ssap_t *ssap, const char *fname, int rval,
const char *fmt, ...);
```

Purpose

This function is used to generate a trace entry when one of the TCAP error codes is generated. It is loosely equivalent to calling `acu_tcap_trace()` with `flags` of `ACU_TCAP_TRF(ONLY, API_ERROR, 5)`.

Parameters

<code>ssap</code>	the <code>ssap</code> structure the trace is for
<code>fname</code>	name of function that is returning the error
<code>rval</code>	TCAP error number (one of <code>ACU_TCAP_ERROR_XXX</code>)
<code>fmt</code>	<code>printf</code> style format string, followed by the arguments

Return value

Always `rval`.

2.1.4.3 `acu_tcap_strerror`

```
const char *acu_tcap_strerror(int rval, unsigned int flags);
```

Purpose

This function returns a text string that describes a TCAP library error code.

Parameters

<code>rval</code>	TCAP error number (one of <code>ACU_TCAP_ERROR_XXX</code>)
<code>flags</code>	0 => return descriptive text, see B.1 1 => return the C name " <code>ACU_TCAP_ERROR_XXX</code> "

Return value

A pointer to a static const string describing the error, unless the error number is unknown in which case the address of a static array filled with the text "`error %d unknown`" is returned.

The error text strings are defined by the `ACU_TCAP_ERRORS` define in `tcap_api.h`.

2.1.5 SCCP access functions

2.1.5.1 acu_tcap_ssap_create

```
acu_tcap_ssap_t *acu_tcap_ssap_create(const char *cfg_file,
acu_tcap_ssap_flags_t flags);
```

Purpose

This function creates a new SCCP access point without establishing the connection to SCCP. The application may set parameters from its own configuration information before the connection to SCCP is established.

Parameters

<code>cfg_file</code>	Name of the configuration file to use, may be <code>NULL</code> If the file cannot be opened, and the name doesn't contain a '/' (or '\') then the library will look for the file in the directories <code>/\${HOME}</code> and <code>/\${ACULAB_ROOT}/ss7</code>
<code>flags</code>	Bitwise OR of:
<code>ACU_TCAP_ITU</code>	Use ITU TCAP message formats
<code>ACU_TCAP_ANSI</code>	Use ANSI TCAP message formats
<code>ACU_TCAP_SERVER</code>	Application is a server process and will be given new transactions (i.e.: inward <code>BEGIN/QUERY</code> messages).
<code>ACU_TCAP_UNI_SERVER</code>	Application will be given inward <code>UNIDIRECTIONAL</code> messages.
<code>ACU_TCAP_LOG_APPEND</code>	Append to the log file.
<code>ACU_TCAP_STATUS_IND</code>	The application will be given all the status indications from SCCP.
<code>ACU_TCAP_LOG_STDERR</code>	Write initialisation errors to <code>stderr</code>

The `SERVER`, `UNI_SERVER` and `LOG_APPEND` flags can also be set from the configuration.

Return value

The address of an initialised `acu_tcap_ssap_t` structure, or `NULL` if `malloc()` fails or the configuration file cannot be accessed.

2.1.5.2 acu_tcap_ssap_delete

```
void acu_tcap_ssap_delete(acu_tcap_ssap_t *ssap);
```

Purpose

This function deletes a SCCP access point, and any TCAP transactions created on it.

Parameters

<code>ssap</code>	The address of the <code>acu_tcap_ssap_t</code> structure to delete
-------------------	---

Return value

None.

2.1.5.3 acu_tcap_ssap_connect_sccp

```
int acu_tcap_ssap_connect_sccp(acu_tcap_ssap_t *ssap);
```

Purpose

This function causes the TCAP library to try to establish a TCP/IP connection between the `ssap` and the SCCP driver code.

The local SSN and POINTCODE must be set before this is called.

After this function completes the TCP connection attempt continues asynchronously, and it may subsequently succeed or fail. When the connection attempt completes, a message of type `ACU_TCAP_MSG_CON_STATE` will be sent to the `ssap`, indicating a state transition. When that message is seen, the application can check the `ssap` connection state, using `acu_tcap_get_con_state()`, to see whether the connection was successfully established.

Note TCAP transactions cannot be created until the connection to SCCP has been established.

Parameters

`ssap` The address of the `acu_tcap_ssap_t` structure to connect to SCCP.

Return value

Zero if successful, `ACU_TCAP_ERROR_XXX` on failure.

2.1.5.4 `acu_tcap_ssap_set_cfg_int/str`

```
int acu_tcap_ssap_set_cfg_int(acu_tcap_ssap_t *ssap, acu_tcap_cfg_param_t
param, unsigned int i_val);
int acu_tcap_ssap_set_cfg_str(acu_tcap_ssap_t *ssap, acu_tcap_cfg_param_t
param, const char *s_val);
```

Purpose

These functions set a configurable value of the `ssap`.

Integer parameters can be set using either function.

Refer to section 2.1.3 for a list of configurable parameters.

Transactions inherit their configuration from the `ssap`.

Parameters

`ssap` The address of the `acu_tcap_ssap_t` structure to modify
`param` Configuration parameter to modify
`i_val` Integer value for parameter
`s_val` String value for parameter

Return value

Zero if successful, `ACU_TCAP_ERROR_XXX` on failure.

2.1.5.5 `acu_tcap_ssap_get_locaddr/remaddr`

```
acu_sccp_addr_t *acu_tcap_ssap_get_locaddr(acu_tcap_ssap_t *ssap);
acu_sccp_addr_t *acu_tcap_ssap_get_remaddr(acu_tcap_ssap_t *ssap);
```

Purpose

These functions return a pointer to the local/remote SCCP address information for this `ssap`. The application can change the structure through the returned pointer. The values can also be set from the configuration file and by the configuration functions.

The local SSN and POINTCODE values are used when connecting to SCCP.

Parameters

`ssap` The address of the `acu_tcap_ssap_t` structure.

Return value

The address of the `acu_sccp_addr_t` structure within the `ssap` data area, or NULL if the `ssap` pointer is invalid.

See section B.2 for details of the `acu_sccp_addr_t` structure.

2.1.6 Transaction functions

2.1.6.1 `acu_tcap_transaction_create`

```
acu_tcap_trans_t *acu_tcap_transaction_create(acu_tcap_ssap_t ssap);
```

Purpose

This function creates a new TCAP transaction on the specified ssap.

Parameters

`ssap` The ssap on which to create a transaction

Return value

The address of an initialised `acu_tcap_trans_t` structure, or `NULL` if the ssap isn't connected to SCCP or if `malloc()` fails.

2.1.6.2 `acu_tcap_transaction_delete`

```
void acu_tcap_transaction_delete(acu_tcap_trans_t *tran);
```

Purpose

This function deletes a TCAP transaction data area and all memory associated with it.

This has the effect of a 'pre-arranged' end on any active TCAP transaction.

Parameters

`tran` The address of the `acu_tcap_trans_t` structure to delete

Return value

None.

Note The transaction data isn't actually deleted until the last message that references the transaction is freed.

2.1.6.3 `acu_tcap_ssap_get_uni_transaction`

```
acu_tcap_trans_t *acu_tcap_ssap_get_uni_transaction(acu_tcap_ssap_t ssap);
```

Purpose

This function returns the address of the transaction on which received unidirectional messages are queued.

The transaction is created either by this call, or when the first unidirectional message is received. If the transaction is deleted it will be re-created when needed.

Note An application will only be given unidirectional messages if 'uni_server = y' is set in the ssap's configuration.

Unidirectional messages can be sent from this transaction, or from another transaction created by `acu_tcap_transaction_create()`.

Parameters

`ssap` The ssap whose unidirectional transaction is required

Return value

The address of an `acu_tcap_trans_t` structure, or `NULL` if `malloc` fails.

2.1.6.4 `acu_tcap_trans_set_userptr`

```
void acu_tcap_trans_set_userptr(acu_tcap_trans_t *tran, void *userptr);
```

Purpose

This function saves the pointer to an application data area for this transaction.

Parameters

`tran` The address of the `acu_tcap_trans_t` structure to modify
`userptr` The pointer to save

2.1.6.5 `acu_tcap_trans_get_userptr`

```
void *acu_tcap_trans_get_userptr(acu_tcap_trans_t *tran);
```

Purpose

This function retrieves the pointer saved by `acu_tcap_set_userptr()`.

Parameters

`tran` The address of the `acu_tcap_trans_t` structure

Return value

The pointer saved previously.

2.1.6.6 `acu_tcap_trans_get_ids`

```
int acu_tcap_trans_get_ids(acu_tcap_trans_t *tran, unsigned int *loc_id,  
unsigned int *rem_id, unsigned int *rem_id_len);
```

Purpose

This function gets the local and remote transaction identifiers.

Parameters

`tran` The address of the `acu_tcap_trans_t` structure to modify
`loc_id` Address of location to write the local transaction id
`rem_id` Address of location to write the remote transaction id
`rem_id_len` Address of location to write the length of the remote transaction id

Any of `loc_id`, `rem_id` and `rem_id_len` may be `NULL` in which case nothing is returned.
`*rem_id_len` will be set to zero if the remote transaction identifier is unknown.

ITU TCAP allows transaction identifiers to be between 1 and 4 bytes. ANSI TCAP always uses 4 byte transaction identifiers. All transaction identifiers created by this product are 4 bytes.

Return value

Zero if successful, `ACU_TCAP_ERROR_XXX` on failure.

2.1.6.7 acu_tcap_trans_set_cfg_int/str

```
int acu_tcap_trans_set_cfg_int(acu_tcap_trans_t *tran, acu_tcap_cfg_param_t
param, unsigned int i_val);
int acu_tcap_trans_set_cfg_str(acu_tcap_trans_t *tran, acu_tcap_cfg_param_t
param, const char *s_val);
```

Purpose

These functions set a configurable value of the transaction data area. The default values for these are inherited from the ssap when a transaction is created.

`acu_tcap_trans_set_cfg_str()` can be used to set an integer parameter from a character string value.

Refer to section 2.1.3 for a list of the configurable parameters.

Parameters

<code>tran</code>	The address of the <code>acu_tcap_trans_t</code> structure to modify
<code>param</code>	Configuration parameter to modify
<code>i_val</code>	Integer value for parameter
<code>s_val</code>	String value for parameter

Return value

Zero if successful, `ACU_TCAP_ERROR_xxx` on failure.

2.1.6.8 acu_tcap_trans_get_locaddr/remaddr

```
acu_sccp_addr_t *acu_tcap_trans_get_locaddr(acu_tcap_trans_t *tran);
acu_sccp_addr_t *acu_tcap_trans_get_remaddr(acu_tcap_trans_t *tran);
```

Purpose

These functions return a pointer to the local/remote SCCP address information for this transaction. The application can change the structure through the returned pointer.

The default values for these are inherited from the ssap when a transaction is created.

The remote address will be set from information in the first message received for each transaction.

To respond from the destination address in a received Begin or Unidirectional message (rather than from the configured address) set the transactions local address with:

```
*acu_tcap_trans_get_locaddr(transaction) = *msg->tm_local_addr;
```

when processing the received message.

Parameters

<code>tran</code>	Transaction
-------------------	-------------

Return value

The address of the structure or NULL if the `tran` pointer is invalid.

See section B.2 for details of the `acu_sccp_addr_t` structure.

2.1.7 Message sending functions

To send a TCAP message, the application must call the following functions in turn:

- `acu_tcap_msg_alloc()` to allocate a message structure.
- `acu_tcap_msg_init()` to add the SCCP address information and the initial part of the TCAP message.
- optionally `acu_tcap_msg_add_dialogue()` to a dialogue portion, usually used to convey an application context.
- optionally `acu_tcap_msg_add_dlg_userinfo()` to add userinfo to the dialogue portion.
- optionally `acu_tcap_msg_add_comp_xxx()` to add a TCAP component.
- `acu_tcap_msg_send()` to finalise the message and send to SCCP and the remote system.

Note Do not directly modify any of the members of the `acu_tcap_msg_t` structure.

The message structure should either be freed (using `acu_tcap_msg_free()`), or reused to send another message for the same transaction.

`acu_tcap_msg_add_comp_xxx()` can be called multiple times in order to add more than one component to a message.

Component parameters must be a single piece of BER encoded ASN.1. For ANSI this must be coded as national/private, constructor with code 18, or as universal, constructor with code 16 (i.e.: the first byte is either 0xf2 or 0x30).

Note ITU specifies that the valid range for an `invoke_id` is -128 to 127. The TCAP library treats values 128 to 255 as equivalent to -128 to -1 to avoid problems with sign extension.

2.1.7.1 `acu_tcap_msg_alloc`

```
acu_tcap_msg_t *acu_tcap_msg_alloc(acu_tcap_trans_t *tran);
```

Purpose

This function allocates a TCAP message for the specified transaction.

The message must be freed later by calling `acu_tcap_msg_free()`.

Parameters

`tran` Transaction this message is for.

Return value

The address of a msg structure if successful, `NULL` on failure.

2.1.7.2 `acu_tcap_msg_free`

```
void acu_tcap_msg_free(acu_tcap_msg_t *msg);
```

Purpose

This function releases all resources associated with the specified `msg`.

Parameters

`msg` Address of message to free

Note Every message must be explicitly freed using this function.

2.1.7.3 `acu_tcap_msg_get_a1b`

```
acu_asn1_buf_t *acu_tcap_msg_get_a1b(acu_tcap_msg_t *msg);
```

Purpose

This function returns the address of the `asn1` encoder structure used to encode/decode the message.

Parameters

`msg` Address of message

2.1.7.4 acu_tcap_msg_init

```
int acu_tcap_msg_init(acu_tcap_msg_t *msg, acu_tcap_msg_type_t type);
```

Purpose

This function starts building a TCAP message for the specified transaction. The SCCP address information and transaction identifiers are written to the start of msg.

The QOS settings are taken from the transaction data area, if necessary they can be changed by calling `acu_tcap_trans_set_cfg_int()` prior to initialising the message.

For a 'pre-arranged' end, just call `acu_tcap_transaction_delete()` to delete the transaction data areas.

Requesting `ACU_TCAP_MSG_DATA` allows the application to send an entire TCAP message (e.g. one extracted from a received message). The data can be added using the ASN.1 encoder functions e.g. `acu_asn1_put_raw_octets()` having called `acu_tcap_msg_get_alb()` to obtain the encoder data area.

Parameters

msg	Message being built	
type	Type of message to build, one of:	
	ACU_TCAP_MSG_ITU_UNI	Unidirectional
	ACU_TCAP_MSG_ITU_BEGIN	Begin
	ACU_TCAP_MSG_ITU_END	End
	ACU_TCAP_MSG_ITU_CONTINUE	Continue
	ACU_TCAP_MSG_ITU_ABORT	Abort
	ACU_TCAP_MSG_ANSI_UNI	Unidirectional
	ACU_TCAP_MSG_ANSI_QUERY	Query with permission (to release)
	ACU_TCAP_MSG_ANSI_QUERY_WO	Query without permission (to release)
	ACU_TCAP_MSG_ANSI_RESPONSE	Response
	ACU_TCAP_MSG_ANSI_CONV	Conversation with permission (to release)
	ACU_TCAP_MSG_ANSI_CONV_WO	Conversation without permission (to release)
	ACU_TCAP_MSG_ANSI_ABORT	Abort
	ACU_TCAP_MSG_DATA	TCAP message header not added

Return value

Zero if successful, `ACU_TCAP_ERROR_xxx` on failure.

2.1.7.5 acu_tcap_msg_add_dialogue

```
int acu_tcap_msg_add_dialogue(acu_tcap_msg_t *msg, unsigned int errval, const void *appl_ctx, int appl_ctx_len);
```

Purpose

This function adds a dialogue portion containing the requested application context name to msg (any dialogue userinfo can be added later).

Dialogue portions are valid in Begin (ANSI Conversation), Unidirectional, Abort, and the first backward message for a transaction. If necessary a dialogue portion will automatically be added to the first backward message if one isn't explicitly requested.

The type of the dialogue PDU is determined by the type of the TCAP message being built.

The `appl_ctx` parameter is ignored when building an ITU Abort message unless it is the first backwards message and the `errval` parameter is either `ACU_TCAP_AARE_REJECT_USER_APPLICATION_CONTEXT_NOT_SUPPORTED` or `ACU_TCAP_AARE_REJECT_PROVIDER_NO_COMMON_DIALOGUE_PORTION` in which case an AARE pdu is generated (i.e.: that used in a Continue/End message) instead of the ABRT pdu that an Abort message would normally contain.

A dialogue portion with a user-specified abstract syntax can be added to a ITU Abort message by calling `acu_tcap_msg_add_dialogue_userinfo()` without calling this routine.

Parameters

msg	Message being built	
errval	Error numbers for dialogue PDUs	
	ITU Begin/Unidirectional	ignored
	ITU Continue/End/Abort (AARE)	typically one of:
	ACU_TCAP_AARE_ACCEPTED_USER	
	ACU_TCAP_AARE_REJECT_USER_NULL	
	ACU_TCAP_AARE_REJECT_USER_NO_REASON	
	ACU_TCAP_AARE_REJECT_USER_APPLICATION_CONTEXT_NOT_SUPPORTED	
	ITU Abort (ABRT)	abort source: 0 => user, 1 => provider
	ANSI Abort	P-Abort-Cause, see 2.1.8.4
	ANSI other messages	ignored
appl_ctx	The application context name, or (ANSI only) NULL for an integer application context name.	
appl_ctx_len	Length in bytes of the application context name, or the numeric application context name if appl_ctx is NULL.	

ITU 'application context names' are encoded as ASN.1 'object identifiers'. The `appl_ctx` pointer should reference the start of the object identifier data, (not the 0x06 byte at the start of a BER encoded object identifier).

The application context will be omitted from an ANSI Unidirectional or Query message if `appl_ctx` is not NULL and `appl_ctx_len` is zero.

An object identifier can be encoded using the `acu_asn1_encode_object_id_str/int()` routines.

E.g.:

```
acu_tcap_msg_add_dialogue(msg, 0, appl_ctx_buf,
    acu_asn1_encode_object_id_str(appl_ctx_buf, sizeof appl_ctx_buf,
        "0.0.17.773.1.1.1"))
```

Although the above object identifier is of TCAP itself, and would never actually appear as an application context.

Return value

Zero if successful, `ACU_TCAP_ERROR_XXX` on failure.

2.1.7.6 acu_tcap_msg_add_dlg_userinfo

```
int acu_tcap_msg_add_dlg_userinfo(acu_tcap_msg_t *msg, const void *uinfo,
    unsigned int len);
```

Purpose

This function adds user information to the dialogue. It can be called multiple times for a single message.

The user information should be encoded as an ASN.1 EXTERNAL item or as a sequence of ASN.1 EXTERNAL data items (with either a sequence tag (0x30), or the implicit constructed tag (0xbe or 0xfd) that appears in the generated message).

It can also be used to add a dialogue portion with user-defined syntax to the later messages of an ITU dialogue. In this case only a single piece of userinfo is allowed.

Parameters

msg	Message being built
uinfo	Address of ASN.1 encoded user information
len	Number of bytes of user information

Return value

Zero if successful, `ACU_TCAP_ERROR_XXX` on failure.

2.1.7.7 `acu_tcap_msg_add_dlg_security_context`

```
int acu_tcap_msg_add_dlg_security_context(acu_tcap_msg_t *msg, const void *sec_ctx, int sec_ctx_len);
```

Purpose

This function adds a security context to an ANSI dialogue.

Parameters

<code>msg</code>	Message being built
<code>sec_ctx</code>	The security context identifier, or <code>NULL</code> for an integer security context identifier.
<code>sec_ctx_len</code>	Length in bytes of the security context identifier, or the numeric security context identifier.

Return value

Zero if successful, `ACU_TCAP_ERROR_xxx` on failure.

2.1.7.8 `acu_tcap_msg_add_dlg_confidentiality`

```
int acu_tcap_msg_add_dlg_confidentiality(acu_tcap_msg_t *msg, const void *cfd_alg, int cfd_alg_len, const void *cfd_val, unsigned int cfd_val_len);
```

Purpose

This function adds confidentiality information to an ANSI dialogue.

Parameters

<code>msg</code>	Message being built
<code>cfd_alg</code>	The confidentiality algorithm identifier, or <code>NULL</code> for an integer identifier.
<code>cfd_alg_len</code>	Length in bytes of the confidentiality algorithm identifier, or the numeric confidentiality algorithm identifier.
<code>cfd_val,</code> <code>cfd_val_len</code>	Pointer to, and length of the ASN.1 encoded confidentiality value.

Return value

Zero if successful, `ACU_TCAP_ERROR_xxx` on failure.

2.1.7.9 acu_tcap_msg_add_comp_invoke

```
int acu_tcap_msg_add_comp_invoke(acu_tcap_msg_t *msg, int invoke_id, int
linked_id, int last_class, int tmo_secs, const void *op_code, int
op_code_len, const void *param, int param_len);
```

Purpose

This function adds a TCAP invoke component to the message being built.

Parameters

msg	Message being built
invoke_id	Invoke identifier, In ANSI it may be ACU_TCAP_NO_INVOKE_ID to suppress the inclusion of an invoke id.
linked_id	Linked id, or ACU_TCAP_NO_INVOKE_ID if no linked-id is required.
last_class	The TCAP operation class 0 or 1 to 4, bitwise 'or' in ACU_TCAP_LAST to generate an ANSI 'INVOKE_LAST' component. The operation classes are: <ul style="list-style-type: none"> 0 Operation state engine disabled, all message sequences are valid 1 Report success or failure (all responses valid) 2 Report failure only (return-result not valid) 3 Report success only (return-error not valid) 4 Outcome not reported (neither return-result nor return-error valid)
tmo_secs	Operation timeout, if zero the configured value is used.
op_code	Address of an ITU global operation object identifier, or an ANSI private operation. NULL for an ITU local operation or an ANSI national operation.
op_code_len	Length in bytes of the operation code, or the numeric value if op_code is NULL.
param, param_len	Pointer to, and length of, any invoke parameter. If param is NULL no parameter will be added.

Note The maximum timeout is 9 hours.

Return value

Zero if successful, ACU_TCAP_ERROR_XXX on failure.

2.1.7.10 acu_tcap_msg_add_comp_result

```
int acu_tcap_msg_add_comp_result(acu_tcap_msg_t *msg, int invoke_id, int
last, const void *op_code, int op_code_len, const void *param, int
param_len);
```

Purpose

This function adds a TCAP result component to the message being built.

Parameters

msg	Message being built
invoke_id	Invoke identifier, In ANSI it may be ACU_TCAP_NO_INVOKE_ID to suppress the inclusion of an invoke id.
last	0 or ACU_TCAP_LAST to generate a 'RESULT_LAST' component.
op_code	ITU: Address of a global operation object identifier, or NULL for a local operation. The operation code will only be added if a parameter is specified. ANSI: set to NULL, the result component has no op_code field.
op_code_len	Length in bytes of the operation code, or the numeric value if op_code is NULL.
param param_len	Pointer to, and length of any result parameter. If param is NULL no parameter will be added.

Return value

Zero if successful, ACU_TCAP_ERROR_XXX on failure.

2.1.7.11 acu_tcap_msg_add_comp_error

```
int acu_tcap_msg_add_comp_error(acu_tcap_msg_t *msg, int invoke_id, const void *error_code, int error_code_len, const void *param, int param_len);
```

Purpose

This function adds a TCAP error component to the message being built.

Parameters

<code>msg</code>	Message being built
<code>invoke_id</code>	Invoke identifier, In ANSI it may be <code>ACU_TCAP_NO_INVOKE_ID</code> to suppress the inclusion of an invoke id.
<code>error_code</code>	Address of an ITU global error object identifier, or an ANSI private error, <code>NULL</code> for an ITU local error or an ANSI national error.
<code>error_code_len</code>	Length in bytes of the error code, or the numeric value if <code>error_code</code> is <code>NULL</code> .
<code>param</code>	Pointer to, and length of any error parameter. If <code>param</code> is <code>NULL</code> no parameter will be added.
<code>param_len</code>	

Return value

Zero if successful, `ACU_TCAP_ERROR_xxx` on failure.

2.1.7.12 acu_tcap_msg_add_comp_reject

```
int acu_tcap_msg_add_comp_reject(acu_tcap_msg_t *msg, int invoke_id, acu_tcap_reject_problem_t problem, const void *param, int param_len);
```

Purpose

This function adds a TCAP component to the message being built.

Parameters

<code>msg</code>	Message being built
<code>invoke_id</code>	Invoke identifier, or <code>ACU_TCAP_NO_INVOKE_ID</code> to suppress the invoke-id field
<code>problem</code>	Problem type and code.
<code>param,</code>	ANSI only, pointer to, and length of any reject parameter. If <code>param</code> is <code>NULL</code> no
<code>param_len</code>	parameter will be added.

The `problem` parameter encodes the problem type and the error value itself as a single field. Valid values are listed in 2.1.8.6

Return value

Zero if successful, `ACU_TCAP_ERROR_xxx` on failure.

2.1.7.13 acu_tcap_msg_add_ansi_abort_userinfo

```
int acu_tcap_msg_add_ansi_abort_userinfo(acu_tcap_msg_t *msg, const void *uinfo, unsigned int len);
```

Purpose

This function adds user information to an ANSI Abort message.

The `userinfo` is an arbitrary sequence of bytes.

Parameters

<code>msg</code>	Message being built
<code>uinfo</code>	Address of the user information
<code>len</code>	Number of bytes of user information

Return value

Zero if successful, `ACU_TCAP_ERROR_xxx` on failure.

2.1.7.14 `acu_tcap_msg_send`

```
int acu_tcap_msg_send(acu_tcap_msg_t *msg);
```

Purpose

This function adds any outstanding parameter terminators to the message being built, sets the overall length fields, and sends the built message to SCCP over the TCP/IP connection.

This function does not free the message buffer. The application may use the buffer to send another TCAP message, or call `acu_tcap_msg_free()` to free the message.

Parameters

`msg` Message to send

Return value

Zero if successful, `ACU_TCAP_ERROR_XXX` on failure.

2.1.7.15 `acu_tcap_msg_reply_reject`

```
int acu_tcap_msg_reply_reject(acu_tcap_msg_t *msg);
```

Purpose

This function generates and sends a continue message containing a single reject component that is the correct response to an `ACU_TCAP_COMP_LOCAL_REJECT` component returned by `acu_tcap_msg_get_component()`.

The application can also use the information from the local reject to add the reject component to a different message.

Parameters

`msg` Received message containing the local reject component

Return value

Zero if successful, `ACU_TCAP_ERROR_XXX` on failure.

2.1.8 Message receiving functions

TCAP messages received from SCCP (via TCP/IP) are queued on, and can be retrieved from queues on both the ssap and transaction data areas.

The application must call `acu_tcap_trans_unblock()` after processing messages that refer to a transaction in order to make any further messages for that transaction available from the ssap queue. The block is applied in order to stop an application having more than one thread processing messages for a single transaction.

The data bytes of the message itself are within a circular buffer used to receive data from the TCP/IP connection. The application must call `acu_tcap_msg_free()` or `acu_tcap_msg_copy_rx_buffer()` in a timely manner to avoid blocking messages for other transactions.

The initial elements of `acu_tcap_msg_t` are exposed in the header file and can be read by the application.

As well as received TCAP messages, other indications from the library to the application are passed through this interface. These additional messages are only added to the ssap queue.

2.1.8.1 `acu_tcap_ssap_msg_get`

```
int acu_tcap_ssap_msg_get(acu_tcap_ssap_t *ssap, int tmo_ms, acu_tcap_msg_t
**msgp);
```

Purpose

This function retrieves the next inbound tcap message from the queue associated with the specified ssap.

A new transaction structure is automatically allocated when a Begin/Query message is retrieved.

Note An application will only be given Begin/Query messages if 'server = y' is set in the ssap's configuration.

Parameters

`ssap` Address of ssap data area
`tmo_ms` Time in milliseconds to wait for a message, 0 => don't wait, -1 => wait forever
`msgp` Address of parameter where the message structure address will be written

Return value

Zero if successful, `ACU_TCAP_ERROR_xxx` on failure.
`*msgp` will be set to `NULL` if the function fails.

The following fields of the message are set:

<code>tm_msg_type</code>	Type of message/indication, one of:	
	<code>ACU_TCAP_MSG_DATA</code>	Data from remote TCAP ({LIX}UDT messages)
	<code>ACU_TCAP_MSG_NOTICE</code>	Error report from SCCP ({LIX}UDTS message)
	<code>ACU_TCAP_MSG_TIMEOUT</code>	Operation timeout
	<code>ACU_TCAP_MSG_CON_STATE</code>	Change in state of TCP/IP connections to SCCP
	<code>ACU_TCAP_MSG_USER_STATUS</code>	Change in status of remote user (from SCCP)
	<code>ACU_TCAP_MSG_SP_STATUS</code>	Change in status of remote signalling point from SCCP
<code>tm_ssap</code>	Address of associated ssap	
<code>tm_trans</code>	Address of associated transaction (may be NULL)	

For `DATA` and `NOTICE` message the following are also set:

<code>tm_local_addr</code>	Destination (ie our) address from SCCP message
<code>tm_remote_addr</code>	Source (ie remote) address from SCCP message
<code>tm_ret_opt</code>	Received SCCP 'return on error' option
<code>tm_seq_ctrl</code>	Received SCCP 'sequential delivery' option
<code>tm_ret_cause</code>	'Return cause' from received {LIX}UDTS message
<code>tm_priority</code>	ANSI message priority, ITU importance (0x££ if ITU option not present)
<code>tm_p_abort_cause</code>	Not set until <code>acu_tcap_msg_decode</code> is called

The dialogue portion and components of DATA and NOTICE messages can be decoded by calling `acu_tcap_msg_decode()` and then `acu_tcap_msg_get_component()`.

For TIMEOUT messages call `acu_tcap_msg_get_component()` to find the timed out operation.

For CON_STATUS call `acu_tcap_msg_get_con_state()` to find the connection states at the time the message was generated, or `acu_tcap_get_con_state()` to find the current state.

For USER_STATUS and SP_STATUS call `acu_tcap_msg_get_sccp_status()` to determine the concerned pointcode and SSN.

2.1.8.2 `acu_tcap_trans_msg_get`

```
int acu_tcap_trans_msg_get(acu_tcap_trans_t *trans, int tmo_ms,
acu_tcap_msg_t **msgp);
```

Purpose

This function retrieves the next inbound tcap message from the queue associated with the specified transaction.

Refer to `acu_tcap_ssap_msg_get()` for information on the possible message types.

Parameters

`trans` Address of transaction data area
`tmo_ms` Time in milliseconds to wait for a message, 0 => don't wait, -1 => wait forever
`msgp` Address of parameter where the message structure address will be written

Return value

Zero if successful, `ACU_TCAP_ERROR_xxx` on failure.
`msgp` will be set to `NULL` if the function fails.

2.1.8.3 `acu_tcap_event_msg_get`

```
int acu_tcap_event_msg_get(acu_tcap_event_t *event, acu_tcap_msg_t **msgp);
```

Purpose

This function retrieves the next inbound tcap message from one of the queues associated with `event`. Refer to section 2.1.12 for more information on the event mechanism.

Refer to `acu_tcap_ssap_msg_get()` for information on the possible message types.

Parameters

`event` Address of an event data area
`msgp` Address of parameter where the message structure address will be written

Return value

Zero if successful, `ACU_TCAP_ERROR_xxx` on failure.
`msgp` will be set to `NULL` if the function fails.

2.1.8.4 acu_tcap_msg_decode

```
int acu_tcap_msg_decode(acu_tcap_msg_t *msg, const acu_tcap_dialogue_t
**dlgp);
```

Purpose

This function performs the initial decode of an inbound tcap data or notice message

If a data message is an ITU BEGIN or an ANSI QUERY then a new transaction is created by the library.

Parameters

msgp Message structure address (from one of the msg_get() functions)
 dlgp Address of parameter where the dialogue structure address will be written

Return value

Zero if successful, ACU_TCAP_ERROR_xxx on failure.

If the message doesn't refer to a valid transaction then msg->tm_trans will be set to NULL (even if it was not NULL before the call).

This function may return an error code due to an invalid TCAP message, in this case tm_msg_type will have been changed (typically to ACU_TCAP_MSG_LOCAL_ABORT).

The tm_msg_type field of msg is changed to indicate the type of the TCAP message:

ACU_TCAP_MSG_LOCAL_ABORT The received message was a protocol error, a P-ABORT message has been sent. msg->tm_p_abort_cause contains the sent cause.

ACU_TCAP_MSG_P_ABORT A P-ABORT was received. msg->tm_p_abort_cause contains the cause, one of:

```
ACU_TCAP_P_ABORT_ITU_UNRECOGNIZED_MESSAGE_TYPE
ACU_TCAP_P_ABORT_ITU_UNRECOGNIZED_TRANSACTION_ID
ACU_TCAP_P_ABORT_ITU_BADLY_FORMATTED_TRANSACTION_PORTION
ACU_TCAP_P_ABORT_ITU_INCORRECT_TRANSACTION_PORTION
ACU_TCAP_P_ABORT_ITU_RESOURCE_LIMITATION
ACU_TCAP_P_ABORT_ITU_ABNORMAL_DIALOGUE
ACU_TCAP_P_ABORT_ANSI_UNRECOGNIZED_PACKAGE_TYPE
ACU_TCAP_P_ABORT_ANSI_INCORRECT_TRANSACTION_PORTION
ACU_TCAP_P_ABORT_ANSI_BADLY_STRUCTURED_TRANSACTION_PORTION
ACU_TCAP_P_ABORT_ANSI_UNASSIGNED_RESPONDING_TRANSACTION_ID
ACU_TCAP_P_ABORT_ANSI_PERMISSION_TO_RELEASE_PROBLEM
ACU_TCAP_P_ABORT_ANSI_RESOURCE_UNAVAILABLE
ACU_TCAP_P_ABORT_ANSI_UNRECOGNIZED_DIALOGUE_PORTION_ID
ACU_TCAP_P_ABORT_ANSI_BADLY_STRUCTURED_DIALOGUE_PORTION
ACU_TCAP_P_ABORT_ANSI_MISSING_DIALOGUE_PORTION
ACU_TCAP_P_ABORT_ANSI_INCONSISTENT_DIALOGUE_PORTION
```

ACU_TCAP_MSG_ITU_UNI A valid TCAP message of the specified type was decoded.

ACU_TCAP_MSG_ITU_BEGIN

ACU_TCAP_MSG_ITU_END

ACU_TCAP_MSG_ITU_CONTINUE

ACU_TCAP_MSG_ITU_ABORT

ACU_TCAP_MSG_ANSI_UNI

ACU_TCAP_MSG_ANSI_QUERY

ACU_TCAP_MSG_ANSI_QUERY_WO

ACU_TCAP_MSG_ANSI_RESPONSE

ACU_TCAP_MSG_ANSI_CONV

ACU_TCAP_MSG_ANSI_CONV_WO

ACU_TCAP_MSG_ANSI_ABORT

Note The user abort information from ANSI abort messages is passed to the application as if it were a component.

If the message has a dialogue portion then `dlgp` will point to a `acu_tcap_dialogue_t` structure that contains the following fields:

<code>td_type</code>	The type of the received dialogue, one of:
<code>ACU_TCAP_DLG_ITU_USER_SYNTAX</code>	ITU dialogue with user defined syntax
<code>ACU_TCAP_DLG_ITU_AARQ_AUDT</code>	ITU dialogue request or unitdata pdu
<code>ACU_TCAP_DLG_ITU_AARE</code>	ITU dialogue response pdu
<code>ACU_TCAP_DLG_ITU_ABRT</code>	ITU dialogue abort pdu
<code>ACU_TCAP_DLG_ANSI</code>	ANSI dialogue
<code>td_flags</code>	Bit pattern indicating which of the fields below are valid:
<code>ACU_TCAP_DF_HAS_UI</code>	<code>td_ui</code> and <code>td_ui_len</code>
<code>ACU_TCAP_DF_HAS_HEX_APP_CTX</code>	<code>td_app_ctx</code> and <code>td_app_ctx_len</code>
<code>ACU_TCAP_DF_HAS_INT_APP_CTX</code>	in <code>td_app_ctx_len</code> (ANSI only)
<code>ACU_TCAP_DF_HAS_AARE_DIAG</code>	<code>td_result</code> is from an ITU AARE pdu, one of:
<code>ACU_TCAP_AARE_ACCEPTED_USER</code>	
<code>ACU_TCAP_AARE_ACCEPTED_PROVIDER</code>	
<code>ACU_TCAP_AARE_REJECT_USER_NULL</code>	
<code>ACU_TCAP_AARE_REJECT_USER_NO_REASON</code>	
<code>ACU_TCAP_AARE_REJECT_USER_APPLICATION_CONTEXT_NOT_SUPPORTED</code>	
<code>ACU_TCAP_AARE_REJECT_PROVIDER_NULL</code>	
<code>ACU_TCAP_AARE_REJECT_PROVIDER_NO_REASON</code>	
<code>ACU_TCAP_AARE_REJECT_PROVIDER_NO_COMMON_DIALOGUE_PORTION</code>	
<code>ACU_TCAP_DF_HAS_ABRT_SOURCE</code>	<code>td_result</code> is user/provider field from an ITU ABRT pdu
<code>ACU_TCAP_DF_HAS_USER_SYNTAX</code>	User syntax data in <code>td_ui</code> and <code>td_ui_len</code>
<code>ACU_TCAP_DF_HAS_INT_SEC_CTX</code>	Integer security context in <code>td_sec_ctx_len</code>
<code>ACU_TCAP_DF_HAS_OBJ_SEC_CTX</code>	<code>td_sec_ctx</code> and <code>td_sec_ctx_len</code>
<code>ACU_TCAP_DF_HAS_INT_CFD_ALG</code>	Integer confidentiality algorithm ID in <code>td_cfg_alg_len</code>
<code>ACU_TCAP_DF_HAS_OBJ_CFD_ALG</code>	<code>td_cfd_alg</code> and <code>td_cfg_alg_len</code>
<code>ACU_TCAP_DF_HAS_CFD_VAL</code>	<code>td_cfd_val</code> and <code>td_cfg_val_len</code>
<code>td_app_ctx, td_app_ctx_len</code>	Pointer to, and length of the application context name (object identifier)
<code>td_result</code>	Error code from ITU AARE or ABRT
<code>td_sec_ctx, td_sec_ctx_len</code>	Pointer to, and length of, security context object identifier (ANSI only)
<code>td_ui, td_ui_len</code>	Pointer to, and length of, dialogue user information
<code>td_cfd_alg, td_cfg_alg_len</code>	Pointer to, and length of, confidentiality algorithm ID object identifier (ANSI only).
<code>td_cfd_val, td_cfg_val_len</code>	Pointer to, and length of, ASN.1 encoded confidentiality value (ANSI only).

2.1.8.5 `acu_tcap_msg_has_components`

```
int acu_tcap_msg_has_components(acu_tcap_msg_t *msg);
```

Purpose

This function is a predicate for determining whether an inbound message has components.

Parameters

`msg` Address of message to check

Return value

Non-zero if the message has components, zero otherwise.

2.1.8.6 acu_tcap_msg_get_component

```
int acu_tcap_msg_get_component(acu_tcap_msg_t *msg, const
acu_tcap_component_t **component);
```

Purpose

This function decodes the next component from the given message. It should be called in a loop until it returns an error.

Some information which isn't strictly part of a TCAP component is also made available through this interface.

Note `acu_tcap_msg_decode()` must be called on a received message before this function.

The component information is invalidated when `acu_tcap_msg_get_component` is called again for the same `msg`, or when `msg` itself is freed.

Parameters

`msg` Address of message to decode
`component` Address where a pointer to the component information is written.

Return value

Zero if successful, `ACU_TCAP_ERROR_NO_COMPONENT` if there are no more components in the message, `ACU_TCAP_ERROR_XXX` on failure.

If successful `component` will point to a structure with the following members:

<code>tc_type</code>	Type of the received component, one of:	
	<code>ACU_TCAP_COMP_LOCAL_REJECT</code>	Malformed component received
	<code>ACU_TCAP_COMP_OP_TIMEOUT</code>	Operation timed out
	<code>ACU_TCAP_COMP_ANSI_ABORT</code>	Userinfo from ANSI abort
	<code>ACU_TCAP_COMP_ITU_INVOKE</code>	
	<code>ACU_TCAP_COMP_ITU_RESULT_LAST</code>	
	<code>ACU_TCAP_COMP_ITU_ERROR</code>	
	<code>ACU_TCAP_COMP_ITU_REJECT</code>	
	<code>ACU_TCAP_COMP_ITU_RESULT_NOTLAST</code>	
	<code>ACU_TCAP_COMP_ANSI_INVOKE_LAST</code>	
	<code>ACU_TCAP_COMP_ANSI_RESULT_LAST</code>	
	<code>ACU_TCAP_COMP_ANSI_ERROR</code>	
	<code>ACU_TCAP_COMP_ANSI_REJECT</code>	
	<code>ACU_TCAP_COMP_ANSI_INVOKE_NOTLAST</code>	
	<code>ACU_TCAP_COMP_ANSI_RESULT_NOTLAST</code>	
<code>tc_flags</code>	Bit-pattern indicating which of the fields below are valid.	
	<code>ACU_TCAP_CF_HAS_INVOKE_ID</code>	<code>tc_invoke_id</code>
	<code>ACU_TCAP_CF_HAS_LINKED_ID</code>	<code>tc_linked_id</code>
	<code>ACU_TCAP_CF_HAS_PARAMETER</code>	<code>tc_param</code> and <code>tc_param_len</code>
	<code>ACU_TCAP_CF_HAS_HEX_OPCODE</code>	<code>tc_op_code</code> and <code>tc_op_code_len</code>
	<code>ACU_TCAP_CF_HAS_INT_OPCODE</code>	<code>tc_op_code_val</code>
	<code>ACU_TCAP_CF_INVOKE_ID_LOCAL</code>	<code>tc_invoke_id</code> is a local invoke id
<code>tc_invoke_id</code>	Invoke-id identifying the operation	
<code>tc_linked_id</code>	Linked invoke-id from invoke message	
<code>tc_op_code, tc_op_code_len</code>	Pointer to, and length of multi-byte operation/result/error code, ITU global, ANSI private	
<code>tc_op_code_val</code>	Integral operation/result/error code, ITU local, ANSI national	
<code>tc_param, tc_param_len</code>	Pointer to, and length of the component parameter	
<code>tc_rejected_type</code>	For <code>LOCAL_REJECT</code> the original message type	
<code>tc_reject_error</code>	For <code>LOCAL_REJECT</code> the reject cause to send	

`acu_tcap_msg_reply_reject()` can be used to send out a reject component in a Continue message in response to a `LOCAL_REJECT` indication.

The 'problem code' from received reject components is put into the tc_op_code_val field. Valid values are for ITU TCAP are:

```

ACU_TCAP_REJECT_ITU_GENERAL_UNRECOGNIZED_COMPONENT
ACU_TCAP_REJECT_ITU_GENERAL_MISTYPED_COMPONENT
ACU_TCAP_REJECT_ITU_GENERAL_BADLY_STRUCTURED_COMPONENT
ACU_TCAP_REJECT_ITU_INVOKE_DUPLICATE_INVOKE_ID
ACU_TCAP_REJECT_ITU_INVOKE_UNRECOGNIZED_OPERATION
ACU_TCAP_REJECT_ITU_INVOKE_MISTYPED_PARAMETER
ACU_TCAP_REJECT_ITU_INVOKE_RESOURCE_LIMITATION
ACU_TCAP_REJECT_ITU_INVOKE_INITIATING_RELEASE
ACU_TCAP_REJECT_ITU_INVOKE_UNRECOGNIZED_LINKED_ID
ACU_TCAP_REJECT_ITU_INVOKE_LINKED_RESPONSE_EXPECTED
ACU_TCAP_REJECT_ITU_INVOKE_UNEXPECTED_LINKED_OPERATION
ACU_TCAP_REJECT_ITU_RESULT_UNRECOGNIZED_INVOKE_ID
ACU_TCAP_REJECT_ITU_RESULT_RETURN_RESULT_UNEXPECTED
ACU_TCAP_REJECT_ITU_RESULT_MISTYPED_PARAMETER
ACU_TCAP_REJECT_ITU_ERROR_UNRECOGNIZED_INVOKE_ID
ACU_TCAP_REJECT_ITU_ERROR_RETURN_ERROR_UNEXPECTED
ACU_TCAP_REJECT_ITU_ERROR_UNRECOGNIZED_ERROR
ACU_TCAP_REJECT_ITU_ERROR_UNEXPECTED_ERROR
ACU_TCAP_REJECT_ITU_ERROR_MISTYPED_PARAMETER

```

And for ANSI TCAP are:

```

ACU_TCAP_REJECT_ANSI_GENERAL_UNRECOGNIZED_COMPONENT_TYPE
ACU_TCAP_REJECT_ANSI_GENERAL_INCORRECT_COMPONENT_PORTION
ACU_TCAP_REJECT_ANSI_GENERAL_BADLY_STRUCTURED_COMPONENT_PORTION
ACU_TCAP_REJECT_ANSI_GENERAL_INCORRECT_COMPONENT_CODING
ACU_TCAP_REJECT_ANSI_INVOKE_DUPLICATE_INVOKE_ID
ACU_TCAP_REJECT_ANSI_INVOKE_UNRECOGNIZED_OPERATION_CODE
ACU_TCAP_REJECT_ANSI_INVOKE_INCORRECT_PARAMETER
ACU_TCAP_REJECT_ANSI_INVOKE_UNRECOGNIZED_CORRELATION_ID
ACU_TCAP_REJECT_ANSI_RESULT_UNASSIGNED_CORRELATION_ID
ACU_TCAP_REJECT_ANSI_RESULT_UNEXPECTED_RETURN_RESULT
ACU_TCAP_REJECT_ANSI_RESULT_INCORRECT_PARAMETER
ACU_TCAP_REJECT_ANSI_ERROR_UNASSIGNED_CORRELATION_ID
ACU_TCAP_REJECT_ANSI_ERROR_UNEXPECTED_RETURN_ERROR
ACU_TCAP_REJECT_ANSI_ERROR_UNRECOGNIZED_ERROR
ACU_TCAP_REJECT_ANSI_ERROR_UNEXPECTED_ERROR
ACU_TCAP_REJECT_ANSI_ERROR_INCORRECT_PARAMETER
ACU_TCAP_REJECT_ANSI_TRANS_UNRECOGNIZED_PACKAGE_TYPE
ACU_TCAP_REJECT_ANSI_TRANS_INCORRECT_TRANSACTION_PORTION
ACU_TCAP_REJECT_ANSI_TRANS_BADLY_STRUCTURED_TRANSACTION_PORTION
ACU_TCAP_REJECT_ANSI_TRANS_UNASSIGNED_RESPONDING_TRANSACTION_ID
ACU_TCAP_REJECT_ANSI_TRANS_PERMISSION_TO_RELEASE
ACU_TCAP_REJECT_ANSI_TRANS_RESOURCE_UNAVAILABLE

```

2.1.8.7 acu_tcap_msg_copy_rx_buffer

```
int acu_tcap_msg_copy_rx_buffer(acu_sccp_msg_t *msg);
```

Purpose

This function copies any data that `msg` references that is in the TCP/IP receive buffer area to a malloced memory area and updates all of the pointers within the message structure to reference the correct locations in the new buffer.

Parameters

`msg` Address of message to process

Return value

Zero if successful, `ACU_TCAP_ERROR_XXX` on failure.

2.1.8.8 acu_tcap_trans_unblock

```
void acu_tcap_trans_unblock(acu_tcap_trans_t *trans);
```

Purpose

This function removes the block that stops inbound messages for the given transaction from being retrieved from the corresponding ssap queue.

The block exists so that a pool of threads can be used to process messages from the ssap queue without having to worry about multiple threads processing messages from the same transaction. It also allows the application to use a separate thread for each transaction, although this is discouraged because of the resource issues with large numbers of threads.

Parameters

`trans` Address of transaction data area

2.1.8.9 acu_tcap_trans_block

```
void acu_tcap_trans_block(acu_tcap_trans_t *trans);
```

Purpose

This function sets the block that stops inbound messages for the given transaction from being retrieved from the corresponding ssap queue.

The block is automatically set whenever a message is retrieved for a transaction.

It may be necessary to manually set the block on a newly created transaction.

Parameters

`trans` Address of transaction data area

2.1.9 Operation functions

These functions control the operation state machine and timers described in section 3.2.1.1.3 of Q.774.

The state engine acts differently for each TCAP class (1 to 4). Setting the class to zero disables the state engine and timeout, all components to be delivered to the application regardless of the sequence in which they arrive.

When a timer expires, a message with `tm_msg_type` set to `ACU_TCAP_MSG_TIMEOUT` will be queued. It will have a single component that identifies the invoke id of the timed-out operation.

Note The maximum timeout is 9 hours.

2.1.9.1 `acu_tcap_operation_timer_start`

```
int acu_tcap_operation_timer_start(acu_tcap_trans_t *trans, int invoke_id,
unsigned int tmo_secs);
```

Purpose

This function starts the operation timer for the given invoke-id.

This can be used by an application to run a timer for its own purposes. The `invoke_id` specified must not be used in an invoke message while the timer is running.

Parameters

<code>trans</code>	Transaction data area
<code>invoke_id</code>	Invoke id of the operation
<code>tmo_secs</code>	Required timeout in seconds

Return value

Zero if successful, `ACU_TCAP_ERROR_XXX` on failure.

2.1.9.2 `acu_tcap_operation_timer_restart`

```
int acu_tcap_operation_timer_restart(acu_tcap_trans_t *trans, int invoke_id,
unsigned int tmo_secs);
```

Purpose

This function restarts the operation timer for the given invoke-id.

An error will be returned if the timer isn't running (e.g.: if it has just expired).

This function can be used to extend the timeout of a TCAP operation.

Parameters

<code>trans</code>	Transaction data area
<code>invoke_id</code>	Invoke id of the operation
<code>tmo_secs</code>	Required timeout in seconds

Return value

Zero if successful, `ACU_TCAP_ERROR_XXX` on failure.

2.1.9.3 acu_tcap_operation_cancel

```
int acu_tcap_operation_cancel(acu_tcap_trans_t *trans, int invoke_id);
```

Purpose

This function cancels the operation timer for the given invoke-id. The timer is stopped and the state machine set to the idle state.

Cancelling an operation is a local action, the remote system is not informed. The application level protocol should allow for any messages that are not sent or discarded.

Parameters

trans Transaction data area
invoke_id Invoke id of the operation

Return value

Zero if successful, ACU_TCAP_ERROR_xxx on failure.

2.1.10 Connection status functions

The TCAP library connects to the SCCP driver using TCP/IP. It connects asynchronously and will automatically attempt to reconnect if the connection fails for any reason.

Changes in the connections' state are reported by queueing an ACU_TCAP_MSG_CON_STATE message onto the ssap message queue. The application must wait until the IN_SERVICE state is reported before creating any transactions.

Note The IDLE -> CONNECTING and CONNECTING -> CONNECTED transitions are not reported.

2.1.10.1 acu_tcap_get_con_state

```
int acu_tcap_get_con_state(acu_tcap_ssap_t *ssap, int con_id, const
acu_tcap_con_state_t **con_state);
```

Purpose

This function returns information about the current state of one of the TCP/IP connections to SCCP.

Parameters

ssap	ssap data area
con_id	0 for the connection to 'host a', 1 for that to 'host b'
con_state	Pointer filled with address of connection state structure.

The acu_tcap_con_state_t structure contains the following fields:

cs_ipaddr	IP address of the connected SCCP (host order)																
cs_tcpport	TCP port number of the connected SCCP																
cs_state	The current state of the connection, one of: <table> <tr> <td>ACU_TCAP_CON_STATE_IDLE</td> <td>Not configured or connect failed</td> </tr> <tr> <td>ACU_TCAP_CON_STATE_CONNECTING</td> <td>TCP connection being made</td> </tr> <tr> <td>ACU_TCAP_CON_STATE_CONNECTED</td> <td>Initial message handshake in progress</td> </tr> <tr> <td>ACU_TCAP_CON_STATE_IN_SERVICE</td> <td>Available for TCAP traffic</td> </tr> </table> <p>If IN_SERVICE the following bits can also be set:</p> <table> <tr> <td>ACU_TCAP_CON_STATE_RX_BLOCKED</td> <td>No space in receive ring buffer area</td> </tr> <tr> <td>ACU_TCAP_CON_STATE_RX_FLOW</td> <td>Receive flow controlled off</td> </tr> <tr> <td>ACU_TCAP_CON_STATE_TX_BLOCKED</td> <td>No TCP transmit window</td> </tr> <tr> <td>ACU_TCAP_CON_STATE_TX_FLOW</td> <td>Transmit flow controlled off</td> </tr> </table>	ACU_TCAP_CON_STATE_IDLE	Not configured or connect failed	ACU_TCAP_CON_STATE_CONNECTING	TCP connection being made	ACU_TCAP_CON_STATE_CONNECTED	Initial message handshake in progress	ACU_TCAP_CON_STATE_IN_SERVICE	Available for TCAP traffic	ACU_TCAP_CON_STATE_RX_BLOCKED	No space in receive ring buffer area	ACU_TCAP_CON_STATE_RX_FLOW	Receive flow controlled off	ACU_TCAP_CON_STATE_TX_BLOCKED	No TCP transmit window	ACU_TCAP_CON_STATE_TX_FLOW	Transmit flow controlled off
ACU_TCAP_CON_STATE_IDLE	Not configured or connect failed																
ACU_TCAP_CON_STATE_CONNECTING	TCP connection being made																
ACU_TCAP_CON_STATE_CONNECTED	Initial message handshake in progress																
ACU_TCAP_CON_STATE_IN_SERVICE	Available for TCAP traffic																
ACU_TCAP_CON_STATE_RX_BLOCKED	No space in receive ring buffer area																
ACU_TCAP_CON_STATE_RX_FLOW	Receive flow controlled off																
ACU_TCAP_CON_STATE_TX_BLOCKED	No TCP transmit window																
ACU_TCAP_CON_STATE_TX_FLOW	Transmit flow controlled off																

cs_failure	The reason why the last connection (or connect attempt) failed, one of: <table> <tr> <td>ACU_TCAP_CON_FAIL_SSAP_DELETED</td> <td>ssap deleted</td> </tr> <tr> <td>ACU_TCAP_CON_FAIL_CON_TIMEOUT</td> <td>TCP/IP connect timed out</td> </tr> <tr> <td>ACU_TCAP_CON_FAIL_CON_REJECTED</td> <td>TCP/IP connection rejected</td> </tr> <tr> <td>ACU_TCAP_CON_FAIL_LOGIN_REJECTED</td> <td>Login sequence failed</td> </tr> <tr> <td>ACU_TCAP_CON_FAIL_INWARD</td> <td>Disconnected by SCCP</td> </tr> <tr> <td>ACU_TCAP_CON_FAIL_KEEPLIVE</td> <td>No response to keepalive</td> </tr> <tr> <td>ACU_TCAP_CON_FAIL_BAD_MESSAGE</td> <td>Corrupt message received</td> </tr> </table>	ACU_TCAP_CON_FAIL_SSAP_DELETED	ssap deleted	ACU_TCAP_CON_FAIL_CON_TIMEOUT	TCP/IP connect timed out	ACU_TCAP_CON_FAIL_CON_REJECTED	TCP/IP connection rejected	ACU_TCAP_CON_FAIL_LOGIN_REJECTED	Login sequence failed	ACU_TCAP_CON_FAIL_INWARD	Disconnected by SCCP	ACU_TCAP_CON_FAIL_KEEPLIVE	No response to keepalive	ACU_TCAP_CON_FAIL_BAD_MESSAGE	Corrupt message received
ACU_TCAP_CON_FAIL_SSAP_DELETED	ssap deleted														
ACU_TCAP_CON_FAIL_CON_TIMEOUT	TCP/IP connect timed out														
ACU_TCAP_CON_FAIL_CON_REJECTED	TCP/IP connection rejected														
ACU_TCAP_CON_FAIL_LOGIN_REJECTED	Login sequence failed														
ACU_TCAP_CON_FAIL_INWARD	Disconnected by SCCP														
ACU_TCAP_CON_FAIL_KEEPLIVE	No response to keepalive														
ACU_TCAP_CON_FAIL_BAD_MESSAGE	Corrupt message received														

cs_fail_text	Textual description of cs_failure, or one of the following texts when the login fails:
--------------	--

Bad Request	Major discrepancy between the versions of the TCAP library and the driver
Responder has gone	The driver is no longer waiting for connections on the requested TCP/IP port. Driver is probably shut down.
Unknown service	TCAP isn't configured in the ss7 driver configuration.
Unknown service parameter	TCAP isn't configured on the requested pointcode.
Incorrect password	The passwords in the application and driver configuration files do not match.
Rejected by server	Connection rejected by TCAP driver stub.
Bad hash in response	Three-way login handshake failed.

Application level acknowledgements are used on the TCP connection in order to avoid blocking the TCP connection itself. Thus the `BLOCKED` states should not happen.

Receive flow control is most likely to occur if the application fails to free receive messages – which have pointers directly into the receive ring buffer area.

If transmit flow control is reported the application should take steps to avoid sending further messages. However all messages sent will be queued by the library.

Return value

Zero if successful, `ACU_TCAP_ERROR_xxx` on failure.

2.1.10.2 `acu_tcap_msg_get_con_state`

```
int acu_tcap_msg_get_con_state(acu_tcap_msg_t *msg, const
acu_tcap_con_state_t **cs_a, const acu_tcap_con_state_t **cs_b)
```

Purpose

This function resolves pointers to the connection state field(s) in messages of type `ACU_MSG_TCAP_CON_STATE`.

This information relates to the state of the connections to SCCP at the time the indication was generated.

Refer to `acu_tcap_get_con_state()` for details of the `acu_tcap_con_state_t` structure.

Parameters

<code>msg</code>	Message structure address (from one of the <code>msg_get()</code> functions)
<code>cs_a</code>	Address of parameter where the 'host a' connection state structure address will be written.
<code>cs_b</code>	Address of parameter where the 'host b' connection state structure address will be written (where SCCP is configured in 'dual' mode).

Return value

Zero if successful, `ACU_TCAP_ERROR_xxx` on failure.

Note The addresses written to `cs_a` and `cs_b` point into the message itself.

2.1.11 Remote SP and SSN status functions

The TCAP library receives status indications from SCCP that show the accessibility of remote entities. The information is saved so that the application can synchronously determine the current status.

The application can also ask to be notified when the status of a remote pointcode or ssn changes. Such changes are reported by queueing an ACU_TCAP_MSG_SCCP_STATUS message onto the ssap message queue.

Additionally the application can request to be given all of the raw status events from SCCP by setting the ACU_TCAP_STATUS_IND flag when the ssap is created.

2.1.11.1 acu_tcap_get_sccp_status

```
int acu_tcap_get_sccp_status(acu_tcap_ssap_t *ssap, unsigned int pointcode,
unsigned int ssn, const acu_tcap_sccp_status_t **sccp_status);
```

Purpose

This function returns information about the current state of the pointcode and ssn.

Parameters

ssap	ssap data area
pointcode	SS7 pointcode of the remote system.
ssn	ssn of remote application
sccp_status	Pointer filled with address of the sccp and user state structure.

The acu_tcap_sccp_status_t structure contains the following fields:

tsp_pc	Remote pointcode												
tsp_ssn	ssn of remote application												
tsp_host	Either 'a' or 'b' depending of which SCCP host the information came from.												
tsp_user_status	Status of the ssn, one of: <table> <tr> <td>ACU_SCCP_UIS</td> <td>User In Service</td> </tr> <tr> <td>ACU_SCCP_UOS</td> <td>User Out of Service</td> </tr> </table>	ACU_SCCP_UIS	User In Service	ACU_SCCP_UOS	User Out of Service								
ACU_SCCP_UIS	User In Service												
ACU_SCCP_UOS	User Out of Service												
tsp_sp_status	Status of the signalling point (from MTP3), one of: <table> <tr> <td>ACU_SCCP_SP_PROHIBIT</td> <td>Prohibited</td> </tr> <tr> <td>ACU_SCCP_SP_ACCESS</td> <td>Accessible</td> </tr> </table>	ACU_SCCP_SP_PROHIBIT	Prohibited	ACU_SCCP_SP_ACCESS	Accessible								
ACU_SCCP_SP_PROHIBIT	Prohibited												
ACU_SCCP_SP_ACCESS	Accessible												
tsp_sccp_status	Status of the remote SCCP, one of: <table> <tr> <td>ACU_SCCP_REM_SCCP_PROHIBIT</td> <td>Prohibited</td> </tr> <tr> <td>ACU_SCCP_REM_SCCP_UNAVAIL</td> <td>Unavailable, reason unknown</td> </tr> <tr> <td>ACU_SCCP_REM_SCCP_UNEQUIP</td> <td>Unequipped</td> </tr> <tr> <td>ACU_SCCP_REM_SCCP_INACCESS</td> <td>Inaccessible</td> </tr> <tr> <td>ACU_SCCP_REM_SCCP_CONGEST</td> <td>Congested</td> </tr> <tr> <td>ACU_SCCP_REM_SCCP_AVAIL</td> <td>Available</td> </tr> </table>	ACU_SCCP_REM_SCCP_PROHIBIT	Prohibited	ACU_SCCP_REM_SCCP_UNAVAIL	Unavailable, reason unknown	ACU_SCCP_REM_SCCP_UNEQUIP	Unequipped	ACU_SCCP_REM_SCCP_INACCESS	Inaccessible	ACU_SCCP_REM_SCCP_CONGEST	Congested	ACU_SCCP_REM_SCCP_AVAIL	Available
ACU_SCCP_REM_SCCP_PROHIBIT	Prohibited												
ACU_SCCP_REM_SCCP_UNAVAIL	Unavailable, reason unknown												
ACU_SCCP_REM_SCCP_UNEQUIP	Unequipped												
ACU_SCCP_REM_SCCP_INACCESS	Inaccessible												
ACU_SCCP_REM_SCCP_CONGEST	Congested												
ACU_SCCP_REM_SCCP_AVAIL	Available												
tsp_tx_cong_cost	A measure of the level of congestion of the remote node.												

Return value

Zero if successful, ACU_TCAP_ERROR_XXX on failure.

2.1.11.2 acu_tcap_msg_get_sccp_status

```
int acu_tcap_msg_get_sccp_status(acu_tcap_msg_t *msg, const
acu_tcap_sccp_status_t **sccp_status);
```

Purpose

This function returns the information about the state of a pointcode and ssn from an ACU_TCAP_MSG_USER_STATUS or ACU_TCAP_MSG_SP_STATUS message.

Parameters

msg Message data area
sccp_status Pointer filled with address of the sccp and user state structure.

Return value

Zero if successful, ACU_TCAP_ERROR_XXX on failure.

2.1.11.3 acu_tcap_enable_user_status

```
int acu_tcap_enable_user_status(acu_tcap_ssap_t *ssap, unsigned int
pointcode, unsigned, int ssn);
```

Purpose

This function enables the receipt of ACU_TCAP_MSG_USER_STATUS messages for the specified pointcode and ssn.

Parameters

ssap ssap data area
pointcode Remote SS7 pointcode from which user status indications are required.
ssn Associated remote SCCP ssn.

The pointcode and/or ssn may be specified as ~0u in which case indications will be given for all pointcodes/ssns.

Note User status is only reported if the SS7 stack configuration file contains an SCCP [CONCERNED] section for the pointcode and ssn.

Return value

Zero if successful, ACU_TCAP_ERROR_XXX on failure.

2.1.11.4 acu_tcap_enable_sp_status

```
int acu_tcap_enable_sp_status(acu_tcap_ssap_t *ssap, unsigned int pointcode);
```

Purpose

This function enables the receipt of ACU_TCAP_MSG_SP_STATUS messages for the specified pointcode.

Parameters

ssap ssap data area
pointcode Remote SS7 pointcode from which user status indications are required.

The pointcode may be specified as ~0u in which case indications will be given for all pointcodes.

Note The 'unavailable', 'unequipped', 'inaccessible' and 'congested' statuses are only reported if the SS7 stack configuration file contains an SCCP [CONCERNED] section for the pointcode.

Return value

Zero if successful, ACU_TCAP_ERROR_XXX on failure.

2.1.12 TCAP message events

The message receiving functions allow an application to wait for messages on an ssap or a transaction, however there are cases where an application may need to wait for messages on a group of transactions, or wait for messages from TCAP and events from some other part of the system. The event mechanism described here solves both these problems.

On Microsoft Windows events are implemented using manual-reset events, on Unix systems pipes are used. This allows the application to use `waitForMultipleObjects` or `poll/select` to wait for TCAP messages. Due to scalability problems with both of these it is inappropriate to allocate an event for each transaction. The application can create an event which can be signalled by messages being queued at several TCAP transactions, or queued at the ssap itself.

Note The transactions must all be on the same ssap

2.1.12.1 `acu_tcap_event_create`

```
acu_tcap_event_t *acu_tcap_event_create(acu_tcap_ssap_t *ssap);
```

Purpose

This function creates an event structure.

Parameters

`ssap` ssap data area

Return value

Address of an initialised event structure. `NULL` if one cannot be allocated or the ssap pointer is invalid.

2.1.12.2 `acu_tcap_event_delete`

```
void acu_tcap_event_delete(acu_tcap_event_t *event);
```

Purpose

This function unlinks the event from any message queues and then deletes the structure itself.

Parameters

`event` Address of event structure

Return value

None.

2.1.12.3 `acu_tcap_event_wait`

```
int acu_tcap_event_wait(acu_tcap_event_t *event, int tmo_ms);
```

Purpose

This function waits for the specified event to be signalled.

Parameters

`event` Address of event data area

`tmo_ms` Time to wait in milliseconds, 0 => don't wait, -1 => wait for ever

Return value

Zero if successful, `ACU_TCAP_ERROR_XXX` on failure.

2.1.12.4 acu_tcap_event_get_os_event

```
acu_tcap_os_event_t acu_tcap_event_get_os_event(acu_tcap_event_t *event);
```

Purpose

This function returns the operating system data item underlying the given event.

The return type is actually `HANDLE` for Windows and `int` for Unix systems.

Parameters

`event` Address of event data area

Return value

For Windows the `HANDLE` of the windows event.

For Unix the file descriptor number of the read side of a pipe.

If the call is invalid 0 is returned, care is taken to ensure the pipe fd number isn't zero, one or two.

2.1.12.5 acu_tcap_event_clear

```
void acu_tcap_event_clear(acu_tcap_event_t *event);
```

Purpose

This function clears (i.e.: returns to the non-signalled state) the operating system item underlying the given event.

The event is automatically cleared if when `acu_tcap_event_msg_get()` returns the last message or fails because no messages are present.

Parameters

`event` Address of event data area

Return value

None.

2.1.12.6 acu_tcap_event_ssap_attach

```
int acu_tcap_event_ssap_attach(acu_tcap_event_t *event, acu_tcap_ssap_t *ssap);
```

Purpose

This function adds the message queue for `ssap` as a source for the event.

Note The `ssap` specified must be the same one specified when the event was created.

Parameters

`event` Address of event data area
`ssap` Address of corresponding `ssap` data area

Return value

Zero if successful, `ACU_TCAP_ERROR_xxx` on failure.

2.1.12.7 acu_tcap_event_ssap_detach

```
int acu_tcap_event_ssap_detach(acu_tcap_event_t *event, acu_tcap_ssap_t *ssap);
```

Purpose

This function removes the message queue for the `ssap` from the sources for event. It reverses the effect of `acu_tcap_event_ssap_attach()`

Parameters

`event` Address of event structure
`ssap` Address of `ssap` data area

Return value

Zero if successful, `ACU_TCAP_ERROR_xxx` on failure.

2.1.12.8 acu_tcap_event_ssap_detach_all

```
int acu_tcap_event_ssap_detach_all(acu_tcap_ssap_t *ssap);
```

Purpose

This function detaches the message queue for the ssap from all events. It is implicitly called if the ssap is deleted.

Parameters

ssap ssap data area

Return value

Zero if successful, ACU_TCAP_ERROR_XXX on failure.

2.1.12.9 acu_tcap_event_trans_attach

```
int acu_tcap_event_trans_attach(acu_tcap_event_t *event, acu_tcap_trans_t *trans);
```

Purpose

This function adds the message queue for trans as a source for the event.

Note The transaction and event must have been created on the same ssap.

Parameters

event Address of event structures
trans Transaction data area

Return value

Zero if successful, ACU_TCAP_ERROR_XXX on failure.

2.1.12.10 acu_tcap_event_trans_detach

```
int acu_tcap_event_trans_detach(acu_tcap_event_t *event, acu_tcap_trans_t *trans);
```

Purpose

This function removes the message queue for trans from the sources for event. It reverses the effect of acu_tcap_event_trans_attach()

Parameters

event Address of event data area
trans Transaction data area

Return value

Zero if successful, ACU_TCAP_ERROR_XXX on failure.

2.1.12.11 acu_tcap_event_trans_detach_all

```
int acu_tcap_event_trans_detach_all(acu_tcap_trans_t *trans);
```

Purpose

This function detaches the message queue for trans from all events. It is implicitly called if the transaction is deleted.

Parameters

trans Transaction data area

Return value

Zero if successful, ACU_TCAP_ERROR_XXX on failure.

2.2 ASN.1 Encoder/Decoder functions

The TCAP library contains a simple ASN.1 BER encoder/decoder that is used internally and can be used by applications to process TCAP dialogues and components.

This encoder does not parse the ASN.1 descriptions found in standards documents, but does handle the correct encoding of multi-byte tags, multi-byte length fields, integers and both definite and indefinite length constructed items.

A separate C call is used to encode/decode every field allowing the application complete flexibility in the way that the data is processed.

ASN.1 tag values must be encoded by the `ACU_ASN1_MAKE_TAG()` `#define`.

2.2.1 Header file `tcap_asn1_codec.h`

This header file defines the constants, structures and function prototypes of the encoder/decoder. It is included by the `tcap_api.h` header file.

2.2.1.1 `acu_asn1_buf_t` structure

The ASN.1 encoder and decoder use the `acu_asn1_buf_t` structure to control the encoding and decoding of ASN.1 data. The application has to access (but must not write to) some of the fields; the offsets of those fields will not change between releases, maintaining binary compatibility for applications. There are other undocumented fields which could change between releases.

The following structure members can be accessed:

<code>a1b_buf</code>	The start of ASN.1 buffer area.
<code>a1b_end</code>	The end of the buffer area. i.e.: after the last byte to decode, or the limit of the buffer for the encoder.
<code>a1b_ptr</code>	The next byte to be decoded, or the location to write the next encoded byte.
<code>a1b_error</code>	The error code for the first error detected since the structure was last initialised.
<code>a1b_error_offset</code>	The offset in the buffer (i.e.: <code>a1b->a1b_ptr - a1b->a1b_buf</code>) when the error was detected.
<code>a1b_error_format</code>	A printf format string that further describes the error.
<code>a1b_error_val_1</code>	The first integer parameter to the format string.
<code>a1b_error_val_2</code>	The second integer parameter to the format string

After using the encoder, the application should use the `a1b_buf` and `a1b_ptr` members to locate the encoded data bytes.

The TCAP library uses the error fields to log any encode or decode errors the to `ssap`'s logfile.

2.2.1.2 Error codes for ASN.1 codec

The ASN.1 encoder and decoder functions return the following error codes, all of which are small negative integers:

<code>ACU_ASN1_ERROR_BAD_TAG</code>	Universal TAG must (not) be constructed.
<code>ACU_ASN1_ERROR_TOOLONG</code>	Encoded data would be larger than 64kB.
<code>ACU_ASN1_ERROR_TOOCONSTRUCTED</code>	Too many levels of constructed ASN.1
<code>ACU_ASN1_ERROR_BAD_DATA</code>	Data length invalid for specified tag.
<code>ACU_ASN1_ERROR_BAD_LENGTH</code>	Data item longer than data in buffer.
<code>ACU_ASN1_ERROR_BAD_CODE</code>	Invalid multi-byte tag value.
<code>ACU_ASN1_ERROR_NOTCONSTRUCTED</code>	Not inside a constructed item.
<code>ACU_ASN1_ERROR_NOMEMORY</code>	<code>malloc()</code> failed.
<code>ACU_ASN1_ERROR_BAD_MAGIC</code>	Supplied address isn't a valid <code>acu_asn1_buf_t</code> structure.
<code>ACU_ASN1_ERROR_TRUNCATED</code>	User supplied buffer too short.

2.2.1.3 ASN.1 tag values

ASN.1 defines four classes of tags 'Universal', 'Application specific', 'Context specific' and 'Private use' each can be qualified as 'constructed' – meaning that the data part is itself ASN.1 encoded. The data format for each of the Universal types is defined by the standard, the format for the other classes will be that of one of the Universal types – but can be 'octetstring' to allow for arbitrary data. The encoding scheme is independent of the class (only the interpretation of the data is defined for Universal). See also Appendix D:

The tag value the application passes to the encoder (and gets back from the decoder) has the 'class', the 'constructed' flag and 24 bits of tag value in a single 32bit quantity. The least significant 8 bits are the first (usually the only) byte written to the buffer, the most significant 24 contain the tag code itself (which is also in the least significant 5 bits for small values).

The following are defined to help the application handle the constants:

ACU_ASN1_UNI (code)	Primitive universal tag with value 'code'
ACU_ASN1_APP (code)	Primitive application tag with value 'code'
ACU_ASN1_CTX (code)	Primitive context specific tag with value 'code'
ACU_ASN1_PRV (code)	Primitive private tag with value 'code'
ACU_ASN1_CONS_UNI (code)	Constructed universal tag with value 'code'
ACU_ASN1_CONS_APP (code)	Constructed application tag with value 'code'
ACU_ASN1_CONS_CTX (code)	Constructed context specific tag with value 'code'
ACU_ASN1_CONS_PRV (code)	Constructed private tag with value 'code'
ACU_ASN1_GET_TAG_CODE (tag)	Returns tag code.
ACU_ASN1_GET_TAG_CLASS (tag)	Returns tag class.
ACU_ASN1_GET_TAG_CONSTRUCTED (tag)	Returns non-zero if the tag is 'constructed'.

The following constants are defined, the values match those from X.690:

Tag classes

ACU_ASN1_TAG_UNIVERSAL	0x00	format defined by the standard
ACU_ASN1_TAG_APPLICATION	0x40	format defined by the application
ACU_ASN1_TAG_CONTEXT	0x80	format depends on the location of the tag
ACU_ASN1_TAG_PRIVATE	0xc0	format defined elsewhere (used by ANSI TCAP)
ACU_ASN1_TAG_CONSTRUCTED	0x20	data is ASN.1 BER encoded

Universal tag codes:

ACU_ASN1_BOOLEAN	0x01
ACU_ASN1_INT	0x02
ACU_ASN1_BITSTRING	0x03
ACU_ASN1_OCTETSTRING	0x04
ACU_ASN1_NULL	0x05
ACU_ASN1_OBJ_ID	0x06
ACU_ASN1_OBJ_DESC	0x07
ACU_ASN1_EXTERNAL	0x08
ACU_ASN1_REAL	0x09
ACU_ASN1_ENUMERATED	0x0a
ACU_ASN1_SEQ	0x10
ACU_ASN1_SET	0x11

2.2.2 Common functions

2.2.2.1 acu_asn1_buf_init

```
acu_asn1_buf_t *acu_asn1_buf_init(acu_asn1_buf_t *alb, const unsigned char
*buf, unsigned int len, unsigned int flags)
```

Purpose

This function initialises the buffer control structure used by the ASN.1 encoder and decoder.

Parameters

alb Structure to initialise. If `NULL` the structure will be allocated using `malloc()`
buf Address of buffer to use. If `NULL` the buffer will be allocated using `malloc()`
`buf` is defined `const` so that a `const` buffer can be passed to the decoder.
len Number of bytes in buffer, initial size if `buf` is `NULL` (when the buffer will be extended as necessary)
flags Bitwise OR of:
`ACU_ASN1_BUF_REINIT`: re-use existing buffer

Return value

The address of an initialised `acu_asn1_buf_t` structure, or `NULL` if `malloc()` fails.

Note Applications should get `acu_asn1_buf_init()` to allocate the structure so that they are not dependant upon the version of the header file used to compile the program.

2.2.2.2 acu_asn1_buf_free

```
void acu_asn1_buf_free(acu_asn1_buf_t *alb)
```

Purpose

This function frees any memory allocated to `alb`, including `alb` itself.

2.2.2.3 acu_asn1_strerror

```
const char *acu_asn1_strerror(int rval, unsigned int flags);
```

Purpose

This function returns a text string that describes an ASN.1 encoder/decoder error code.

Parameters

rval ASN.1 encoder error number (one of `ACU_ASN1_ERROR_XXX`)
flags 0 => return descriptive text
 1 => return the C name "`ACU_ASN1_ERROR_XXX`"

Return value

A pointer to a static `const` string describing the error, unless the error number is unknown in which case the address of a static array filled with the text "error %d unknown" is returned.

The error text strings are defined by the `ACU_ASN1_ERRORS` define in `tcap_asn1_codec.h`.

2.2.3 ASN.1 Encoder Functions

The ASN.1 encoder functions all add the given item to the buffer. They correctly encode the `tag` and `length` bytes, and then copy in the user specified data.

The library remembers the number of constructed items, and the start point for a small number so that short constructed items can use the definite length format.

Many of the encoding routines are equivalent to calls to `acu_asn1_put_octetstring()` but have different arguments; all can be used for any ASN.1 data type.

The tag values should be generated using one of the `ACU_ASN1_XXX(code)` defines.

Appendix D: contains a brief description of the format of ASN.1 BER encoded data.

2.2.3.1 `acu_asn1_put_constructed`

```
int acu_asn1_put_constructed(acu_asn1_buf_t *alb, unsigned int tag);
```

Purpose

This function starts the encoding of a constructed item, writing the ASN.1 tag byte(s) and an indefinite length mark (which may be overwritten with the actual length by `acu_asn1_put_end_constructed`).

The `ACU_ASN1_TAG_CONSTRUCTED` bit is always set in the supplied tag.

Parameters

`alb` Control structure for the request.
`tag` Tag to be encoded.

Return value

Zero if successful, `ACU_ASN1_ERROR_XXX` on failure.

2.2.3.2 `acu_asn1_put_end_constructed`

```
int acu_asn1_end_constructed(acu_asn1_buf_t *alb);
```

Purpose

This function terminates the encoding of a constructed item, either replacing the indefinite length written by `acu_asn1_put_constructed()` with the actual length, or writing an indefinite length terminator.

Parameters

`alb` Control structure for the request.

Return value

Zero if successful, `ACU_ASN1_ERROR_XXX` on failure.

2.2.3.3 `acu_asn1_put_end_all_constructed`

```
int acu_asn1_end_all_constructed(acu_asn1_buf_t *alb, int depth);
```

Purpose

This function terminates the encoding of multiple constructed items. It calls `acu_asn1_end_constructed()` until there are `depth` levels of constructed items.

Parameters

`alb` Control structure for the request.
`depth` Required depth of construction

Return value

Zero if successful, `ACU_ASN1_ERROR_XXX` on failure.

2.2.3.4 acu_asn1_put_int

```
int acu_asn1_put_int(acu_asn1_buf_t *alb, unsigned int tag, int value);
```

Purpose

This function encodes a signed integer. One, two, three or four bytes may be needed depending on the actual value.

Parameters

alb Control structure for the request.
tag Tag to be encoded
value Value to be encoded

Return value

Zero if successful, ACU_ASN1_ERROR_XXX on failure.

2.2.3.5 acu_asn1_put_unsigned

```
int acu_asn1_put_unsigned(acu_asn1_buf_t *alb, unsigned int tag, unsigned int value, unsigned int length);
```

Purpose

This function encodes the least significant bits of an unsigned 32bit integer in the specified number of bytes.

Parameters

alb Control structure for the request.
tag Tag to be encoded
value Value to be encoded
len Number of bytes to encode (0 to 4)

Return value

Zero if successful, ACU_ASN1_ERROR_XXX on failure.

2.2.3.6 acu_asn1_put_octet_8

```
int acu_asn1_put_octet_8(acu_asn1_buf_t *alb, unsigned int tag, unsigned int val1, unsigned int val2);
```

Purpose

This function encodes two 32bit integers as eight bytes.

This function exists in order to encode ANSI transaction-ids.

Parameters

alb Control structure for the request.
tag Tag to be encoded
val1 First 32 bits of value to be encoded
val2 Second 32 bits of value to be encoded

Return value

Zero if successful, ACU_ASN1_ERROR_XXX on failure.

2.2.3.7 acu_asn1_put_octetstring

```
int acu_asn1_put_octetstring(acu_asn1_buf_t *alb, unsigned int tag, const void *buf, unsigned int len);
```

Purpose

This function encodes the given data as an octetstring.

Parameters

alb Control structure for the request.
tag Tag to be encoded
buf Pointer to data to be encoded
len Number of bytes to be encoded

Return value

Zero if successful, ACU_ASN1_ERROR_XXX on failure.

2.2.3.8 acu_asn1_put_bitstring

```
int acu_asn1_put_bitstring(acu_asn1_buf_t *alb, unsigned int tag, const void *buf, unsigned int len);
```

Purpose

This function encodes the given data as a bitstring.

Parameters

alb Control structure for the request.
tag Tag to be encoded
buf Pointer to data to be encoded
len Number of bits to be encoded

Return value

Zero if successful, ACU_ASN1_ERROR_XXX on failure.

2.2.3.9 acu_asn1_put_raw_octets

```
int acu_asn1_put_raw_octets(acu_asn1_buf_t *alb, const void *buf, unsigned int len);
```

Purpose

This function copies the given data into the target buffer. The caller is responsible for ensuring that it is valid ASN.1

Parameters

alb Control structure for the request.
buf Pointer to data to be copied
len Number of bytes to be copied

Return value

Zero if successful, ACU_ASN1_ERROR_XXX on failure.

2.2.3.10 acu_asn1_put_space

```
void *acu_asn1_put_space(acu_asn1_buf_t *alb, unsigned int len);
```

Purpose

This function allocates space in the target buffer, returning a pointer to the space. The caller can then copy the required ASN.1 into the buffer area.

Note The address returned must not be used after any other encoding function is called.

Parameters

`alb` Control structure for the request.
`len` Number of bytes to be allocate

Return value

Pointer to the allocated space if successful, NULL on failure.

2.2.3.11 `acu_asn1_encode_object_id_str/int`

```
int acu_asn1_encode_object_id_str(unsigned char *buf, int buflen, const char *id_str);  
int acu_asn1_encode_object_id_int(unsigned char *buf, int buflen, ...);
```

Purpose

Theses functions convert an ASN.1 object identifier to its binary form in the user-supplied buffer. `acu_asn1_encode_object_id_str()` converts from a string of numbers separated by dots, `acu_asn1_encode_object_id_int()` converts from the list of numbers passed as arguments – terminating on a argument of `~0u`.

Both `acu_asn1_encode_object_id_str(buf, sizeof buf, "0.0.17.773.1.1.1")` and `acu_asn1_encode_object_id_int(buf, sizeof buf, 0, 0, 17, 773, 1, 1, 1, ~0u)` generate the same 7 bytes {0x0, 0x11, 0x86, 0x5, 0x1, 0x1, 0x1} of a TCAP 'Dialogue-as-id' (see table 37/Q.773).

The encoded object identifier does not contain an ASN.1 type and length, these will normally be added by a call to `acu_asn1_put_octetstring()`.

Parameters

`buf` Buffer area in which to write the encoded object identifier.
`buflen` Maximum size of encoded object identifier
`id_str` String form of object identifier to convert

Return value

The number of bytes written into `buf`. If the encoded object identifier is longer than `maxlen` then it is silently truncated.

2.2.4 ASN.1 Decoder functions

The ASN.1 decoder functions process an input buffer sequentially. The maximum depth of constructed items is limited to 32, of which 16 may have definite length. Deeply constructed ASN.1 can be decoded in stages by using `acu_asn1_get_reference()`.

Any ASN.1 formatting errors (e.g.: a length that spans the end of the buffer) are reported by the individual routines. The first such error is saved in the `acu_asn1_buf_t` structure.

2.2.4.1 `acu_asn1_get_tag_len`

```
int acu_asn1_get_tag_len(acu_asn1_buf_t *alb, int *length);
```

Purpose

This function decodes the header of the next ASN.1 item.

Follow with a call to one of the other `acu_asn1_get_xxx()` functions to obtain the item's value, or call `acu_asn1_get_tag_len()` again to decode the contents of a constructed item.

The returned `tag` value is encoded as if by the `ACU_ASN1_xxx(code)` or `ACU_ASN1_xxx_CONS(code)` defines. The `ACU_ASN1_GET_TAG_xxx(tag)` defines can be used to extract the sub-fields (e.g., for diagnostic prints).

Parameters

`alb` Control structure for the request.
`length` Address of where the item length will be written to.
 this will be `ACU_ASN1_INDEFINITE_LENGTH` for indefinite length constructed items.

Return value

Zero with `length` zero for end of constructed item, zero with `length` -1 for end of buffer, `ACU_ASN1_ERROR_xxx` on failure, otherwise the tag value for the next item.

2.2.4.2 `acu_asn1_get_reference`

```
int acu_asn1_get_reference(acu_asn1_buf_t *alb, int data_only, const unsigned char **bufptr);
```

Purpose

This function returns the address and length of an item. The item may be primitive or constructed.

Parameters

`alb` Control structure for the request.
`data_only` If non-zero `bufptr` will point to the first data byte, if zero it will point to the first byte of the ASN.1 type field.
`bufptr` Address of where a pointer to the data will be written

Return value

Length of the item if successful, `ACU_ASN1_ERROR_xxx` on failure.

2.2.4.3 acu_asn1_get_int

```
int acu_asn1_get_int(acu_asn1_buf_t *alb, int *value);
```

Purpose

This function obtains a signed integer value. The length of the ASN.1 field must be between 1 and 4.

Parameters

alb Control structure for the request.
value Address of where the data value will be written

Return value

Zero if successful, ACU_ASN1_ERROR_XXX on failure.

2.2.4.4 acu_asn1_get_unsigned

```
int acu_asn1_get_unsigned(acu_asn1_buf_t *alb, unsigned int *value);
```

Purpose

This function obtains a zero to four-byte value as an unsigned 32-bit integer.

Parameters

alb Control structure for the request.
value Address of where the data value will be written

Return value

Zero if successful, ACU_ASN1_ERROR_XXX on failure.

2.2.4.5 acu_asn1_get_octet_8

```
int acu_asn1_get_octet_8(acu_asn1_buf_t_t *alb, unsigned int *val_1, unsigned int *val_2);
```

Purpose

This function obtains an eight-byte value as two 32-bit integers.

Parameters

alb Control structure for the request.
val_1 Address of where the first 4 bytes of the data value will be written
val_2 Address of where the second 4 bytes of the data value will be written

Return value

Zero if successful, ACU_ASN1_ERROR_XXX on failure.

2.2.4.6 acu_asn1_get_octetstring

```
int acu_asn1_get_octetstring(acu_asn1_buf_t *alb, void *buf, unsigned int buflen);
```

Purpose

This function copies the parameter to the user-supplied buffer.

Parameters

alb Control structure for the request.
buf Address of the buffer where the data will be written
buflen Length of the buffer

Return value

Length of the parameter if successful, ACU_ASN1_ERROR_XXX on failure.

2.2.4.7 acu_asn1_decode_object_id_str/int

```
int acu_asn1_decode_object_id_str(char *tgt, unsigned int tgtlen, const
unsigned char *obj, unsigned int objlen);
int acu_asn1_decode_object_id_int(unsigned int *tgt, unsigned int tgtlen,
const unsigned char *obj, unsigned int objlen);
```

Purpose

These functions convert the binary form of an ASN.1 object identifier to a NUL terminated string or an array of integer values.

Parameters

tgt	Address of the buffer where the decoded data will be written
tgtlen	Number of entries in the target array.
obj	Address of the object identifier
objlen	Length of the object identifier

Return value

On success `acu_asn1_decode_object_id_str()` returns zero and `acu_asn1_decode_object_id_int()` returns the number of values written to `tgt`. On failure both return one of the `ACU_ASN1_ERROR_xxx` values.

2.3 Thread support functions

Support functions are provided for multi-threaded applications. They provide an operating independent interface to threads and thread synchronization functions.

Some of the functions are actually `#defines` within the header file `tcap_synch.h`. Because of this, the function arguments may be evaluated more than once.

Additional error information may be available in an operating system dependant manner (e.g.: by inspecting `errno`).

These functions are used within the TCAP library itself. They are exposed by its interface, and portable applications may decide to use them internally.

On Unix systems the functions use the `pthread` library routines.

2.3.1 Mutex functions

Mutexes are used to protect data areas from concurrent access by more than one thread.

The mutex functions are non-recursive under Linux and Solaris. Under Windows an error message will be output to `stderr` if a mutex is acquired recursively.

On Windows systems mutexes are implemented using the critical-section functions so that acquiring an uncontested mutex does not require a system call.

2.3.1.1 `acu_tcap_mutex_create`

```
int acu_tcap_mutex_create(acu_tcap_mutex_t *mutex);
```

Purpose

This function initialises the mutex, allocating any operating system resources needed.

Parameters

`mutex` Address of the mutex to initialise.

Return value

Zero on success, -1 on failure.

2.3.1.2 `acu_tcap_mutex_delete`

```
void acu_tcap_mutex_delete(acu_tcap_mutex_t *mutex);
```

Purpose

This function frees all the operating system resources associated with the mutex. The mutex must not be locked when it is deleted.

Parameters

`mutex` Address of the mutex delete.

2.3.1.3 `acu_tcap_mutex_lock`

```
int acu_tcap_mutex_lock(acu_tcap_mutex_t *mutex);
```

Purpose

This function locks the mutex. If the mutex is already locked the thread will block until the mutex is unlocked.

Parameters

`mutex` Address of the mutex to lock

Return value

Zero on success, -1 on failure.

2.3.1.4 `acu_tcap_mutex_trylock`

```
int acu_tcap_mutex_trylock(acu_tcap_mutex_t *mutex);
```

Purpose

This function attempts to lock the mutex. If the mutex is already locked then it will return immediately with a non-zero return value.

Parameters

`mutex` Address of the mutex to lock

Return value

Zero on success, -1 on failure.

2.3.1.5 `acu_tcap_mutex_unlock`

```
void acu_tcap_mutex_unlock(acu_tcap_mutex_t *mutex);
```

Purpose

This function unlocks the mutex. A mutex can only be unlocked by the thread that locked it

Parameters

`mutex` Address of mutex to unlock.

2.3.2 Condition variable functions

Condition variables allow one thread to wait until signalled by a different thread. To avoid timing windows all accesses to a condition variable must be protected by the same mutex.

Under Windows, a condition variable is implemented using two manual reset events that are used alternately, with the last thread to exit resetting the event. This avoids any problems associated with `PulseEvent()` and kernel mode APC. It also allows the mutex to be implemented using the critical section functions – avoiding a system call when the mutex is available.

2.3.2.1 `acu_tcap_condvar_create`

```
int acu_tcap_condvar_create(acu_tcap_cond_t *condvar);
```

Purpose

This function initialises the condition variable, allocating any operating system resources needed.

Parameters

`condvar` Address of the condition variable to initialise

Return value

Zero on success, -1 on failure.

2.3.2.2 `acu_tcap_condvar_delete`

```
void acu_tcap_condvar_delete(acu_tcap_cond_t *condvar);
```

Purpose

This function frees the operating system resources allocated to the condition variable. No threads must be waiting for a condition variable when it is deleted.

Parameters

`condvar` Condition variable to delete

2.3.2.3 `acu_tcap_condvar_wait`

```
int acu_tcap_condvar_wait(acu_tcap_cond_t *condvar, acu_tcap_mutex_t *mutex);
```

Purpose

This function waits for the condition variable to be signalled. The mutex is released atomically with the wait and re-acquired before the function returns.

Parameters

`condvar` Condition variable to wait for
`mutex` Mutex associated with this condvar

Return value

Zero on success, -1 on failure.

2.3.2.4 `acu_tcap_condvar_wait_tmo`

```
int acu_tcap_condvar_wait_tmo(acu_tcap_cond_t *condvar, acu_tcap_mutex_t  
*mutex,  
int millisecs);
```

Purpose

This function waits for the condition variable to be signalled. If the condition variable isn't signalled within the specified timeout it will return -1.

Parameters

`condvar` Condition variable to wait for
`millisecs` The maximum time to wait in milliseconds
`mutex` Mutex associated with this `condvar`

Return value

Zero on success, -1 on failure or if the wait times out.

2.3.2.5 `acu_tcap_condvar_broadcast`

```
int acu_tcap_condvar_broadcast(acu_tcap_cond_t *condvar);
```

Purpose

This function signals the condition variable. All threads blocked in `acu_tcap_condvar_wait()` or `acu_tcap_condvar_wait_tmo()` on the specified condition variable are woken up.

The calling thread must hold the mutex associated with the `condvar`.

Parameters

`condvar` Address of the condition variable to signal

Return value

Zero on success, -1 on failure.

2.3.3 Thread functions

2.3.3.1 acu_tcap_thread_create

```
int acu_tcap_thread_create(acu_tcap_thrd_id_t *id, ACU_TCAP_THREAD_FN((*fn),
arg), void *fn_arg);
```

Purpose

This function creates a new thread to run the caller supplied function. The thread function can be defined portably as:

```
static ACU_TCAP_THREAD_FN(fn, arg)
{
    ...
    acu_tcap_thread_exit(1, 0);
    return 0;
}
```

Parameters

id	Data area to hold thread identification
fn	Function to call in the new thread
fn_arg	Argument to pass fn

Return value

Zero on success, -1 on failure.

2.3.3.2 acu_tcap_thread_exit

```
void acu_tcap_thread_exit(int detach, unsigned int rval);
```

Purpose

This function causes the current thread to terminate itself.

Parameters

detach	If non-zero the thread will exit and free all associated system resources. If zero <code>acu_tcap_thread_join()</code> must be called to free the resources.
rval	Return value to pass to the caller of <code>acu_tcap_thread_join()</code> .

If a thread function returns (instead of calling `acu_tcap_thread_exit`) then it is not detached and `acu_tcap_thread_join` must be called to free the operating system resources.

2.3.3.3 acu_tcap_thread_join

```
void acu_tcap_thread_join(acu_tcap_thrd_id_t *id, unsigned int *rval);
```

Purpose

This function waits for the specified thread to terminate, saves the thread return code, and frees all the system resources associated with the thread.

Parameters

id	Thread identification data for the thread (from <code>acu_tcap_thread_create</code>)
rval	Pointer to a where the thread return code will be written

2.3.3.4 acu_tcap_thread_id

```
int acu_tcap_thread_id(void);
```

Purpose

This function returns an operating system supplied identifier for the current thread.

Return value

The operating system identifier for the current thread. This has the same value as the `att_thrd_id` field of the `acu_tcap_thrd_id_t` structure.

2.3.4 Thread Pool functions

Thread pools allow an application to execute a function in a different thread without the overhead of creating a thread, and restricting the total number of threads by queuing the request until a thread becomes available.

2.3.4.1 `acu_tcap_thread_pool_create`

```
acu_tcap_thr_pool_t *acu_tcap_thread_pool_create(unsigned int min_threads,
        unsigned int max_threads, unsigned int max_queued_jobs);
```

Purpose

This function creates a thread pool.

Parameters

<code>min_threads</code>	Minimum (initial) number of threads to create
<code>max_threads</code>	Maximum number of threads
<code>max_queued_jobs</code>	Maximum permitted length of pending job list

Return value

The address of the pool, or NULL if the pool cannot be created.

The `min_threads` parameter allows a thread pool to be populated with the indicated number of threads before `acu_tcap_thread_pool_create()` returns. If `min_threads` is zero, the thread pool is initially empty.

The `max_threads` parameter allows a thread pool to be constrained to no more than the indicated number of threads. If `max_threads` is large, the availability of system resources will also constrain thread pool growth.

The default behaviour of `acu_tcap_thread_pool_submit()` is to add the user-supplied job to a list of pending jobs if an idle thread is not available. The `max_queued_jobs` parameter limits the maximum length of this pending job list.

2.3.4.2 `acu_tcap_thread_pool_destroy`

```
int acu_tcap_thread_pool_destroy(acu_tcap_thr_pool_t *pool);
```

Purpose

This function destroys a thread pool.

Parameters

<code>pool</code>	The pool address.
-------------------	-------------------

Return value

Zero if successful, `ACU_TCAP_ERROR_BAD_THREAD_POOL` on failure.

The call to `acu_tcap_thread_pool_destroy()` blocks until any active user-supplied jobs have returned.

2.3.4.3 `acu_tcap_thread_pool_num_active`

```
int acu_tcap_thread_pool_num_active(acu_tcap_thr_pool_t *pool);
```

Purpose

This function returns the number of threads running user-supplied jobs.

Parameters

<code>pool</code>	The pool address.
-------------------	-------------------

Return value

Zero if successful, `ACU_TCAP_ERROR_BAD_THREAD_POOL` on failure.

2.3.4.4 acu_tcap_thread_pool_num_idle

```
int acu_tcap_thread_pool_num_idle(acu_tcap_thrd_pool_t *pool);
```

Purpose

This function returns the number of idle threads in the pool.

Parameters

pool The pool address.

Return value

Zero if successful, ACU_TCAP_ERROR_BAD_THREAD_POOL on failure.

2.3.4.5 acu_tcap_thread_pool_num_jobs

```
int acu_tcap_thread_pool_num_jobs(acu_tcap_thrd_pool_t *pool);
```

Purpose

This function returns the number of jobs on the pool's list of pending jobs.

Parameters

pool The pool address.

Return value

Zero if successful, ACU_TCAP_ERROR_BAD_THREAD_POOL on failure.

2.3.4.6 acu_tcap_thread_pool_submit

```
int acu_tcap_thread_pool_submit(acu_tcap_thrd_pool_t *pool,
    void (*fn)(void *), void *arg, unsigned int flags);
```

Purpose

This function submits a user-supplied job to a thread pool.

If no idle threads are available (and the number of threads in the pool is below the limit set during pool creation), some new threads will be added. If an attempt at pool growth fails to produce an idle thread capable of handling the user's job, the job will be added to the pool's list of pending jobs. The job list will be serviced in FIFO order as existing threads complete their current jobs.

The above default behaviour may be modified by inclusion of the flags described below.

Parameters

pool	The pool address
fn	Function to be called by a thread from the thread pool
arg	Argument to pass to fn
flags	A bitwise OR of zero or more of:
ACU_TCAP_THREAD_POOL_F_BLOCKING	If no idle threads are available, the call to acu_tcap_thread_pool_submit() will block until a thread becomes available.
ACU_TCAP_THREAD_POOL_F_NO_JOB	When no idle threads are available (and any attempt at pool growth has failed), the function and argument specified will not be added to the pool's list of outstanding jobs.

Return value

Zero if successful or one of the following on failure:

```
ACU_TCAP_ERROR_BAD_THREAD_POOL
ACU_TCAP_ERROR_THREAD_POOL_NO_FREE_THREADS
ACU_TCAP_ERROR_MALLOC_FAIL
```

Appendix A: Building TCAP applications

A.1 Linux

The TCAP API header file includes all the necessary system headers.
Compile with `-D_REENTRANT`.
Link with `-lpthread`.

A.2 Solaris

The TCAP API header file includes all the necessary system headers.
Compile with `-D_REENTRANT`.
Link with `-lthread`.

A.3 Windows

To obtain the correct definitions the symbol `_WINSOCKAPI_` must be defined before `windows.h` is included. One way to achieve this is to specify `-D_WINSOCKAPI_` on the compiler command line.

Since the TCAP library itself creates threads, the program must be compiled as a threaded program. ie: build with `-MT` (or `-MTd`) not `-ML`.

The application must also include `windows.h` and `winsock2.h` before the TCAP API header file.

Appendix B: tcap_api.h

B.1 Error Codes

The error codes returned by the TCAP library functions are small negative integers. API functions may return any of the error codes below, not just those identified in the section for the API function itself.

In most cases more detailed information is written to the logfile.

ACU_TCAP_ERROR_SUCCESS	Call succeeded (guaranteed to be zero).
ACU_TCAP_ERROR_NO_COMPONENT	No more components in received message.
ACU_TCAP_ERROR_TIMEDOUT	Request timed out.
ACU_TCAP_ERROR_NO_MESSAGE	There are no messages on the specified queue.
ACU_TCAP_ERROR_NO_INFORMATION_AVAILABLE	Requested information isn't available.
ACU_TCAP_ERROR_MALLOC_FAIL	The library failed to allocate memory for a data item. Check the application for memory leaks.
ACU_TCAP_ERROR_NO_THREADS	The TCAP library failed to create a thread. Check that the application isn't using more threads than the operating system can support.
ACU_TCAP_ERROR_BAD_TRANSACTION	The <code>acu_tcap_trans_t</code> parameter doesn't reference a valid transaction data area.
ACU_TCAP_ERROR_BAD_SSAP	The <code>acu_tcap_ssap_t</code> parameter doesn't reference a valid ssap data area.
ACU_TCAP_ERROR_BAD_MESSAGE	The <code>acu_tcap_msg_t</code> parameter doesn't reference a valid message data area.
ACU_TCAP_ERROR_BAD_EVENT	The <code>acu_tcap_event_t</code> parameter doesn't reference a valid event data area.
Note	The above four errors are likely to be caused by the application using a stale pointer.
ACU_TCAP_ERROR_BAD_OS_EVENT	An internal function tried to use an invalid operating system event or file descriptor.
ACU_TCAP_ERROR_WRONG_MSG_TYPE	The message buffer isn't the correct type for the called function.
ACU_TCAP_ERROR_ALREADY_CONNECTED	The ssap is already connected to (or is trying to connect to) SCCP.
ACU_TCAP_ERROR_NO_LOCAL_SSN	No local SCCP sub-system number has been set.
ACU_TCAP_ERROR_NO_LOCAL_POINTCODE	No local MTP3 pointcode has been set.
ACU_TCAP_ERROR_UNKNOWN_CONFIG_PARAM	Configuration parameter not known.
ACU_TCAP_ERROR_INVALID_CONFIG_VALUE	Invalid, or out of range, configuration parameter value.
ACU_TCAP_ERROR_CANNOT_OPEN_CONFIG_FILE	The configuration file cannot be opened.
ACU_TCAP_ERROR_BAD_TRANSACTION_STATE	The transaction isn't in the correct state for the request.
ACU_TCAP_ERROR_INVOKE_ID_OUTSTATE	The operation state engine rejected the request because the specified invoke-id is not

in the correct state.

ACU_TCAP_ERROR_INVOKE_ID_IDLE

The operation state engine rejected the request because the specified invoke-id is not in use.

ACU_TCAP_ERROR_ASN1_ENCODING

An application supplied buffer isn't valid ASN.1, or an error from the ASN.1 encoding functions.

ACU_TCAP_ERROR_INVALID_PROBLEM_TYPE

Requested reject problem doesn't refer to a valid problem type.

ACU_TCAP_ERROR_INVALID_DIALOGUE_USERINFO

Supplied dialogue userinfo isn't a valid ASN.1 external data item.

ACU_TCAP_ERROR_DIALOGUE_NOT_ALLOWED

The transaction state doesn't allow a dialogue portion to be added to the current message.

ACU_TCAP_ERROR_NO_REMOTE_TRANS_ID

The message requires a remote transaction-id, but none is available. E.g.: trying to send a CONTINUE message on a newly created transaction.

ACU_TCAP_ERROR_INVALID_MSG_TYPE

The specified message type is invalid for the TCAP variant.

ACU_TCAP_ERROR_BUILD_SEQUENCE

The application is attempting to build a TCAP message in an order other than that of the final message. E.g.: Trying to define the dialogue portion after a component has been added.

ACU_TCAP_ERROR_INVALID_DIALOGUE_USER_SYNTAX

The received dialogue portion of an abort message isn't an ASN.1 external data item, or is one of the TCAP pdus.

ACU_TCAP_ERROR_BAD_ASN1

Received message is invalidly encoded ASN.1.

ACU_TCAP_ERROR_BAD_PROTOCOL_VERSION

None of the proposed protocol versions are supported.

ACU_TCAP_ERROR_BAD_TCAP_MSG

The received message isn't encoded according to the protocol rules.

ACU_TCAP_ERROR_BAD_LOCAL_TID

The received message doesn't contain a valid local transaction identifier. All local transaction identifiers are 4 bytes long.

ACU_TCAP_ERROR_BAD_REMOTE_TID

The received message either doesn't contain a remote transaction identifier, contains one when it should not, or contains a different one from that already saved for the local transaction.

ACU_TCAP_ERROR_UNKNOWN_MESSAGE_TYPE

The received message isn't a valid TCAP message.

ACU_TCAP_ERROR_THREAD_POOL_NO_FREE_THREADS

No free threads, or thread pool job queue full.

ACU_TCAP_ERROR_BAD_THREAD_POOL

The `acu_tcap_thrd_pool_t` parameter doesn't reference a valid thread pool data area.

Note Do not confuse the above error codes with call control error codes that have the same numeric values.

B.2 SCCP addresses

The `acu_sccp_addr_t` structure has the following fields:

<code>sa_flags</code>	bitwise 'or' of the following:
	<code>ACU_SCCP_SA_FLAGS_ROUTE_SSN</code> route on SSN (even if global title present)
	<code>ACU_SCCP_SA_FLAGS_RAW_GT</code> raw global title (unknown <code>sa_gti</code>)
<code>sa_valid</code>	indicates which address elements contain valid data, bitwise 'or' of:
	<code>ACU_SCCP_SA_VALID_GTI</code>
	<code>ACU_SCCP_SA_VALID_SSN</code>
	<code>ACU_SCCP_SA_VALID_PC</code>
	<code>ACU_SCCP_SA_VALID_RL_PC</code>
	<code>ACU_SCCP_SA_VALID_TT</code>
	<code>ACU_SCCP_SA_VALID_NP</code>
	<code>ACU_SCCP_SA_VALID_ES</code>
	<code>ACU_SCCP_SA_VALID_NAI</code>
<code>sa_gti</code>	global title indicator (4 bits)
<code>sa_ssn</code>	subsystem number
<code>sa_pc</code>	SS7 signalling pointcode for/from SCCP address buffer
<code>sa_rl_pc</code>	SS7 signalling pointcode from MTP3 routing label
<code>sa_tt</code>	translation type (8 bits)
<code>sa_np</code>	numbering plan (4 bits)
<code>sa_es</code>	encoding scheme (4 bits)
<code>sa_nai</code>	nature of address indicator (7 bits)
<code>sa_gt.sag_num</code>	number of digits in <code>sa_gt.sag_digits</code>
<code>sa_gt.sag_digits[]</code>	global title address information, two digits per byte

The global title indicator placed in outbound messages depends on which of the `ss_tt`, `sa_np`, `sa_es` and `sa_nai` fields are marked as valid, not on the value of `sa_gti`.

The `sa_gt.sag_num` field contains the number of digits (not bytes) in the global title. The application need not care about the odd/even field of the encoded global title.

The `sa_rl_pc` field contains the pointcode from the MTP3 routing label of received messages, it has no effect on outward messages.

When routing using global titles, if the `sa_pc` field is set then the SCCP driver will not perform global title translation and will send the message to that point code, if the `sa_pc` is not set then global title translation is performed.

The SCCP protocol constrains the valid combinations of TT, NP, ES and NAI. NP and ES must always be specified together. NAI is not valid for ANSI SCCP, and, for ITU and China SCCP, must be specified on its own or with TT, NP and ES.

The first digit of the global title is encoded in the least significant 4 bits of `sa_gt.sag_digits[0]` and the second digit in the most significant 4 bits. This matches the protocol encoding, but is reversed from a normal hexdump of the address buffer.

Appendix C: System limits

The following limits are inherent in the design of the TCAP product, however other constraints (e.g. lack of memory) may apply first:

Dimension	Limit	Notes
Connections to an SCCP system	4094	Also constrained by available server-side resources.
Transactions per library ssap	983040	Cost a few kb per transaction.
Operations per transaction	256	No additional cost per operation.

Appendix D: ASN.1 BER encoding

 
This section contains a brief description of the ASN.1 BER (Basic Encoding Scheme) used for TCAP and associated protocols. For a complete definition refer to X.690 (formerly X.209).

BER encodes data in a byte aligned ‘type’, ‘length’, ‘value’ (TLV) manner, X.690 uses the term ‘identifier’ for the type and ‘contents’ for the value. The ‘length’ is always exclusive – i.e.: the ‘identifier’ and ‘length’ bytes are excluded from the specified length

The ‘identifier’ field can specify that the ‘contents’ is further BER encoded data – i.e.: is a ‘constructed’ item. The ‘identifier’ and ‘length’ fields are usually a single byte, but the encoding allows larger values to be described using multiple bytes. Constructed items can be marked as having an ‘indefinite length’, in which case a terminating data item is used.

D.1 Basic encoding rules

Data items with small tags and short lengths are encoded as:



Where:

- c1 Class of tag:
 - 00 Universal, data type and encoding is defined by X.680 and X.690
 - 01 Application wide [APPLICATION n]
 - 10 Context specific [n]
 - 11 Private use [PRIVATE n] (Used by ANSI TCAP)
 The encoding rules do not depend on the class.
- p 0 if primitive, 1 if constructed.
- tag Identifier for data (zero to 30).
- length Number of data bytes (zero to 127).

Tags larger than 30 (which are unusual) are encoded by setting the tag bits of the initial byte to 31, and following it with extra bytes. Each additional byte contains 7 bits of the tag value (most significant bits in the first extra byte), all but the last extra byte having its most significant bit set. So a context-specific primitive field with tag of 31 is encoded as 0x9f 0x1f, tag 127 as 0x9f 0x7f, and tag 128 as 0x9f 0x81 0x00 etc.

Lengths larger than 127 are encoded by setting the most significant bit of the length byte to a 1 and putting the number of bytes required to encode the length into the lower 7 bits. The length itself then follows with 8 bits per byte and the most significant byte first. So a length of 128 is encoded as 0x81 0x80, 255 as 0x81 0xff, and 256 as 0x82 0x01 0x00 etc.

Constructed items can be encoded with an ‘indefinite length’. This is useful if the overall length isn’t known when tag for the item is written. This is done by specifying 0x80 for the length byte and using two zero bytes to terminate the constructed item. The TCAP library ASN.1 encoding functions use the indefinite length form for all constructed items that exceed 127 bytes.

Note **TCAP requires that definite length fields be encoded in their shortest form.**

A data item might be defined as:

```
result [0] INTEGER,
```

Which is encoded ‘context specific’ ‘constructed’ 0, followed by the ‘universal’ coding for an integer. Giving 0xa0 0x03 0x02 0x01 0x2a when result is 42 (or 0xa0 0x80 0x02 0x01 0x2a 0x00 0x00 if the indefinite length form is used).

More usually it would be defined as:

```
result [0] IMPLICIT INTEGER,
```

Which is encoded ‘context specific’ ‘primitive’ 0, followed by the data of the integer coding. i.e.: 0x80 0x01 0x2a.

D.2 Universal tags

The common universal tags are:

0		Reserved for encoding indefinite length terminators
1	Boolean	One byte, 0 => false, other values => true
2	Integer	2s compliment signed integer most significant byte first, encoded in the minimum number of bytes.
3	Bitstring	First byte indicates the number of unused bits in the last byte [0..7]. Latter bytes contain bits with the 0x80 bit used first.
4	Octetstring	Any sequence of bytes
5	Null	Length always zero, no data bytes
6	Object Identifier	See below
8	External data	See below
10	Enumerated	Encoded as an integer
16	Sequence	A constructed item where the data items have to appear in the specified order
17	Set	A constructed item where the data items can appear in any order and may be repeated.

X.690 allows octetstring and bitstring to be constructed (i.e.: made up of several concatenated parts). However the TCAP specification requires that they be primitive.

D.2.1 Object Identifiers

Object identifiers are globally assigned hierarchic identifiers used for data structures and protocols. In ASN.1 definitions they are typically specified as (for example):

```
{ itu-t recommendations q 773 modules (2) messages (1) version2 (2) }
```

Each field is converted to a number using the rules defined in Annex B of X.680. The latter identifiers have the numeric value in parenthesis. The first identifier is one of *itu-t* (0), *iso* (1) or *joint-iso-itu-t* (2). *itu-t* used to be *ccitt*.

If the first identifier is *itu-t*, the second is one of *recommendation* (0), *question* (1), *administration* (2), *network-operator* (3), or *identified-organization* (4). For recommendations the next identifier is based of the letter (with *a* => 1 and *z* => 26) and the following one the number of the relevant document. Corporate bodies may have an object tree subsidiary to the identified-organization identifier.

If the first identifier is *iso*, the second is one of *standard* (0), *member-body* (2) or *identified-organization* (3).

The above example is thus the series of decimal numeric values 0, 0, 17, 773, 2, 1, 2. The first two are converted to a single byte by multiplying the first by 40 and adding in the second. Values greater than 127 are converted to multiple bytes by putting 7 bits into each byte and setting the most significant bit of all but the last byte. So the data byte to encode for the above example are 0x00 0x11 0x86 0x05 0x02 0x01 0x02.

D.2.2 External data

External data items are used to refer to ASN.1 definitions in other documents. X.690 section 8.18 defines the external data type as:

```
[UNIVERSAL 8] IMPLICIT SEQUENCE {
  direct-reference          OBJECT IDENTIFIER OPTIONAL,
  indirect-reference       INTEGER OPTIONAL,
  data-value-descriptor   ObjectDescriptor OPTIONAL,
  encoding                 CHOICE {
    single-ASN1-type       [0] ABSTRACT-SYNTAX.&Type,
    octet-aligned          [1] IMPLICIT OCTET STRING,
    arbitrary              [2] IMPLICIT BIT STRING } }
```

In ITU TCAP they usually contain a direct reference to an object identifier that refers to a standards document, and use the single-ASN.1-type encoding to encapsulate the relevant data.